

***DUCATI*** *SUPERBIKE*  
1098 / 1098S / 1098S Tricolore

<https://www.motorcycle-manual.com/>

<https://www.motorcycle-manual.com/>

We would like to welcome you among Ducati enthusiasts, and congratulate you on your excellent choice of motorcycle. We are sure that you will use your Ducati for longer journeys as well as short daily trips, but however you use your motorcycle, Ducati Motor Holding s.p.a wishes you an enjoyable ride.

Ducati Motor Holding S.p.A. recommends that you adhere strictly to the instructions in this manual, especially those regarding the running-in period. This will ensure that your Ducati motorcycle will continue to be a pleasure to ride. For repairs or advice, please contact one of our authorized service centres.

We also provide an information service for all Ducati owners and enthusiasts for any advice and suggestions you might need.

Enjoy the ride!



## Notes

Ducati Motor Holding S.p.A. cannot accept any liability for errors that may have occurred in the preparation of this manual. All information in this manual is valid at the time of going to print. Ducati Motor Holding S.p.A. reserves the right to make any modifications required due to the ongoing development of their products.

For safety and reliability, to avoid invalidating the warranty and to maintain the value of your motorcycle, use only original Ducati spare parts.



## Warning

This manual is an integral part of the motorcycle and, if ownership of the motorcycle is transferred to a third party, the manual must be handed over to the new owner.

<https://www.motorcycle-manual.com/>

# Table of contents

## General indications 6

- Warranty 6
- Symbols 6
- Useful road safety information 7
- Riding with a full load 8
- Identification data 9

## Controls 10

- Position of the motorcycle controls 10
- Instrument panel 11
- LCD – Main functions 13
- LCD – How to set/display parameters 15
- The immobilizer system 36
- Code card 37
- Immobilizer override procedure 38
- Duplicate keys 40
- Ignition switch and steering lock 41
- Left-hand handlebar switch 42
- Clutch lever 43
- Right-hand handlebar switch 44
- Throttle twistgrip 44
- Front brake lever 45
- Rear brake pedal 46
- Gearchange pedal 46
- Adjusting the position of the gearchange and rear brake pedals 47

## Main components and devices 49

- Position on motorcycle 49
- Fuel tank filler cap 50
- Seat lock 51
- Sidestand 52
- Steering damper 53
- Front fork adjusters 54
- Shock absorber adjusters 56
- Adjusting the rear ride height 58

## Riding the motorcycle 60

- Running-in precautions 60
- Pre-ride checks 62
- Starting the engine 63
- Moving off 65
- Braking 65
- Stopping the motorcycle 66
- Parking 66
- Refuelling 67
- Toolkit and accessories 68
- USB Data Acquisition (DAQ) (for 1098S - 1098S Tricolore) 69

## Main maintenance operations 70

- Removing the fairing panels 70
- Checking and topping up the coolant 74
- Checking the brake and clutch fluid level 75
- Checking the brake pads for wear 77
- Lubricating cables and joints 78
- Adjustment of the throttle cable free play 79
- Wrapping the cables 80

<https://www.motorcycle-manual.com/>

Checking the chain tension 81  
Lubricating the drive chain 81  
Changing the high and low beam bulbs 82  
Changing the sidelight bulb 84  
Rear turn indicators 85  
Number plate light 85  
Headlight aim 86  
Rearview mirror adjustment 87  
Tubeless tyres 88  
Checking the engine oil level 90  
Cleaning and renewing the spark plugs 91  
General cleaning 92  
Storing the motorcycle 93  
Important notes 93

## Maintenance 94

Programmed maintenance plan: operations to be carried out by the dealer 94  
Programmed maintenance plan: operations to be carried out by the dealer 97

## Technical data 98

Dimensions (mm) 98  
Weights 98  
Engine 100  
Timing system 100  
Performance data 100  
Spark plugs 101  
Fuel system 101  
Brakes 101

Transmission 102  
Frame 103  
Wheels 103  
Tyres 103  
Suspension 104  
Exhaust system 104  
Available colours 104  
Electrical system 105

Routine maintenance record 109

## For United States of America version Only 111

Reporting of safety defects 111  
Safety warnings 111  
Noise emission warranty 111  
Noise and exhaust emission control system information 111  
Tampering warning 112  
Riding safety 113  
Protective apparel 114  
Vehicle identification number (VIN) 114  
Label location 115  
California evaporation emission system 117  
Ducati limited warranty on emission control system 117

Routine maintenance record 120

<https://www.motorcycle-manual.com/>

# General indications

E

## Warranty

In your own interest, and in order to ensure the reliability of the motorcycle, you are strongly advised to contact a Ducati Dealer or Authorized Service Centre for any servicing that requires particular technical expertise.

Our highly qualified staff have access to the specialised tools required to perform any servicing job to the highest professional standards, using only Ducati original spare parts as the best guarantee for perfect interchangeability, smooth running and long service life.

All Ducati motorcycles come with a Warranty Booklet. However, the warranty does not apply to motorcycles used in competitions. If any motorcycle part is tampered with, modified, or replaced with parts other than original Ducati spare parts during the warranty period, the warranty is automatically invalidated.

## Symbols

Ducati Motor Holding S.p.A. advises you to read this manual carefully in order to familiarise yourself with your motorcycle. If in doubt, please contact a Ducati Dealer or Authorized Service Centre. You will find the information in the manual useful on trips (which Ducati Motor Holding S.p.A. hopes will be smooth and enjoyable), and it will help you obtain top performance from your motorcycle for a long time. This booklet uses a set of symbols with special meanings:



### Warning

Failure to comply with these instructions may put you at risk, and could lead to severe injury or even death.



### Important

Risk of damage to the motorcycle and/or its components.



### Notes

Additional information about the current operation.

References to the **right** or **left** side of the motorcycle assume you are sitting on the seat, facing forward.

<https://www.motorcycle-manual.com/>

## Useful road safety information



### Warning

Read this section before riding your motorcycle.

Many accidents are the result of the inexperience of the rider. Always make sure you have your licence with you; you need a valid licence that entitles you to ride a motorcycle.

Do not lend your motorcycle to persons who are inexperienced or do not hold a valid licence.

Riders and passengers must **always** wear appropriate clothing and a safety helmet.

Do not wear loose clothes or accessories that could become tangled in the controls or limit your field of vision.

Never start or run the engine in enclosed space. Exhaust gases are toxic and may lead to loss of consciousness or even death within a short time.

The rider should keep his/her feet on the footrests when the motorcycle is in motion.

**Always** hold the handlebars firmly with both hands so you will be ready for sudden changes in direction or in the road surface. The pillion passenger should **always** hold on to the grab rail on the rear seat with both hands.

Obey the legal requirements and observe national and local regulations.

**Always** respect the speed limits where these are indicated, and **never** exceed the speed allowed by the particular visibility, road and traffic conditions.

**Always** signal your intention to turn or change lane in good time, using the appropriate turn indicators.

Be sure you are clearly visible and avoid riding within the blind spot of a vehicle in front of you.

Be very careful at road junctions, or when riding in areas near exits from private land or car parks, or on the slip roads to motorways.

**Always** turn off the engine when refuelling. Be extremely careful not to spill fuel on the engine or on the exhaust pipe when refuelling.

Do not smoke when refuelling.

While refuelling, it is possible to inhale noxious fuel vapours. Should any fuel drops be spilled on your skin or clothing, immediately wash with soap and water and change your clothing.

**Always** remove the key if leaving your motorcycle unattended.

The engine, exhaust pipes and silencers remain hot for a long time.



### Warning

The exhaust system might be hot even after engine is switched off; take special care not to touch exhaust system with any part of your body and do not park the motorcycle next to inflammable material (wood, leaves etc.).

Park your motorcycle where no one is likely to knock against it, and use the sidestand.

Never park on uneven or soft ground, or your motorcycle may fall over.

<https://www.motorcycle-manual.com/>

## Riding with a full load

Your motorcycle is designed for travelling over long distances with a full load in complete safety.

Even weight distribution is critical for maintaining safety standards, and to avoid getting into difficulties when making sudden manoeuvres or riding on bumpy roads.

### **E Information on load capacity**

The total weight of the motorcycle in running order with rider, luggage and additional accessories should not exceed 390 kg.

Arrange your luggage or heavy accessories in the lowest possible position and as close to centre of the motorcycle as possible.

Secure the luggage firmly to the motorcycle structure.

Luggage incorrectly secured may cause the motorcycle to become unstable.

Never attach bulky or heavy objects to the top yoke or front mudguard, as this would cause dangerous instability.

Do not insert objects into gaps in the frame, where they could interfere with moving parts.

Check that the tyres are inflated to the pressure indicated on page 88 and that they are in good condition.

## Identification data

All Ducati motorcycles have two identification numbers, one for the frame (fig. 1) and one for the engine (fig. 2).

---

Frame number

---

---



Engine number

---



### Notes

These numbers indicate the motorcycle model and should be quoted when ordering spare parts.

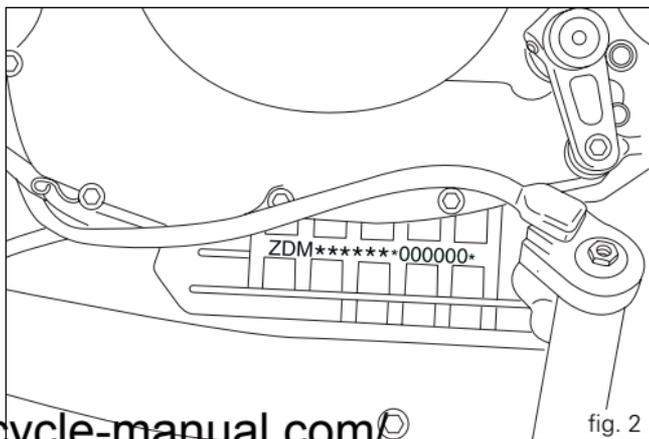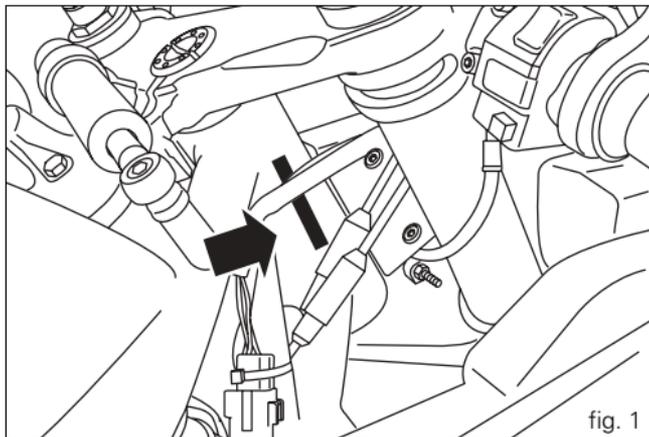

# Controls

E




## Warning

This section shows the position and function of the controls used to drive the motorcycle. Be sure to read this information carefully before you use the controls.

## Position of the motorcycle controls (fig. 3)

- 1) Instrument panel.
- 2) Key-operated ignition switch and steering lock.
- 3) Left-hand handlebar switch.
- 4) Clutch lever.
- 5) Rear brake pedal.
- 6) Right-hand handlebar switch.
- 7) Throttle twistgrip.
- 8) Front brake lever.
- 9) Gearchange pedal.

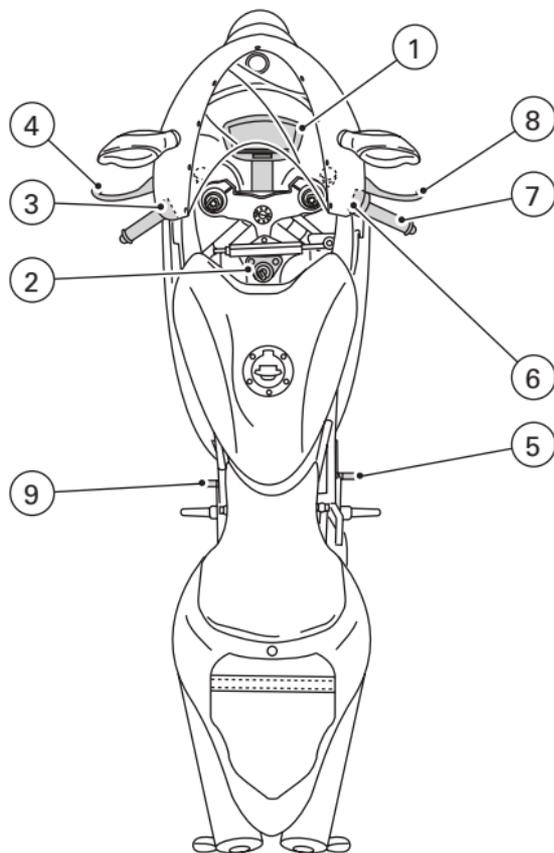

<https://www.motorcycle-manual.com/>

fig. 3

## Instrument panel (fig. 4)

1) **LCD**, (see page 13).

2) **Tachometer** (rpm).

Indicates engine revs per minute.

3) **Neutral (N) indicator (green)**.

Illuminates when the gearbox is in neutral.

4) **Fuel warning light**  (yellow).

Illuminates when there are about 3 litres of fuel left in the tank.

5) **Turn signal indicator light**  (green).

Illuminates and flashes when the turn signal is in operation.

6) **Engine oil pressure warning light**  (red).

Illuminates when engine oil pressure is too low. This light should illuminate when the ignition is switched to **ON** and should go out a few seconds after the engine starts.

It may come on briefly if the engine is very hot, but should go out again as engine speed increases.



### Important

If this light (6) stays on, stop the engine to avoid serious damage.

7) **High beam warning light**  (blue).

Illuminates when the high beam headlight is on.

8) **“Engine diagnostics light”**  (amber/amber).

The engine control unit turns on this light permanently to indicate an error leading to engine block.

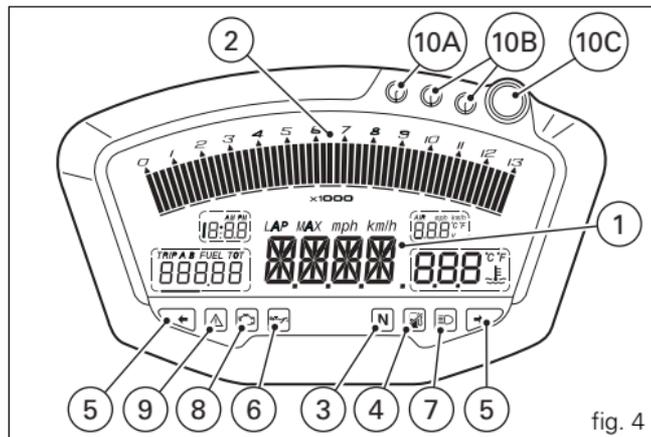


fig. 4

9) **“Motorcycle diagnostics” light**.

Illuminates when the motorcycle diagnostics detects a problem.

10) **Rev limiter indicator lights**

Indicator light 10A: illuminates steadily at 800 rpm before intervention of the rev limiter.

Indicator light 10A on steadily + 10B: illuminate steadily 400 rpm before intervention of the rev limiter.


Indicator light 10A + 10B flashing + 10C: start flashing when the rev limiter is reached.

11) **Control buttons A and B.**

Button used for displaying and setting instrument panel parameters. It has two positions, A "▲" and B "▼".

12) **High beam headlight FLASH button** (fig. 5).

The button that normally has the high beam flasher function can be used for the LAP and USB DAQ functions.

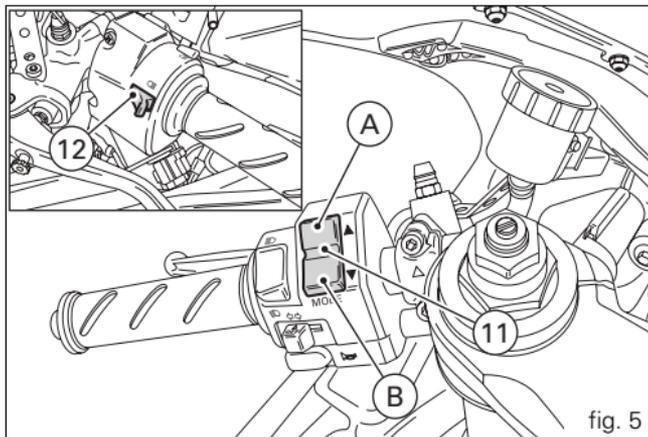

E

## LCD – Main functions



### Warning

Any adjustments to the instrument panel must only be carried out when the motorcycle is stationary. Never operate the instrument panel controls while riding the motorcycle.

1) **Speedometer.**

Indicates road speed.

2) **Odometer.**

Shows total distance travelled.

3) **Trip meter.**

Shows the distance travelled since the last reset (TRIP A and TRIP B).

4) **Fuel reserve trip counter.**

Shows distance travelled on the reserve fuel.

5) **Clock.**

6) **Lap time.**

7) **Rev counter (RPM).**

8) **Recording of lap time, maximum speed and maximum rpm.**

9) **Battery voltage indicator (BATT).**

10) **Air temperature indicator.**

11) **Coolant temperature indicator.**

Indicates engine coolant temperature.



### Important

Stop riding if the temperature reaches the maximum value, otherwise the engine might be damaged.

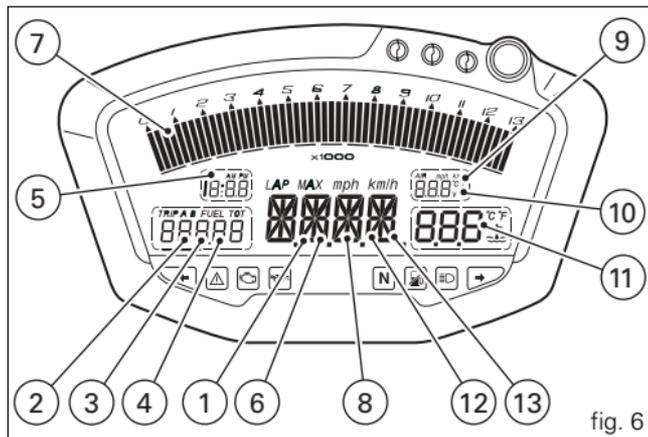


fig. 6

12) **Servicing indicator (SERV)** (fig. 6).

The message "SERV" indicates that the service interval has been reached. The message is displayed only at Key-On for 5 seconds. The service indicator will be reset at a Ducati Authorised Workshop during the service.

13) **DAQ (USB)** (fig. 6).

Indicates that the USB DAQ has been activated.

E



### Important

The instrument panel incorporates diagnostic functions for the electronic injection/ignition system. The relative menus are for the use of trained personnel only. If you accidentally access this function, turn the key to **OFF** and have the motorcycle checked at an authorized Ducati Service Centre.

## LCD – How to set/display parameters

At key-on (key turned from **OFF** to **ON**) the instrument panel activates all the digits of the LCD for 1 second and switches on the indicator lights in sequence.

It then reverts to “normal” mode and, in place of motorcycle speed, shows the model and, for 2 seconds, also the version (EU, UK, USA, CND, FRA, JAP).

The model is displayed cyclically until the engine is started.

E

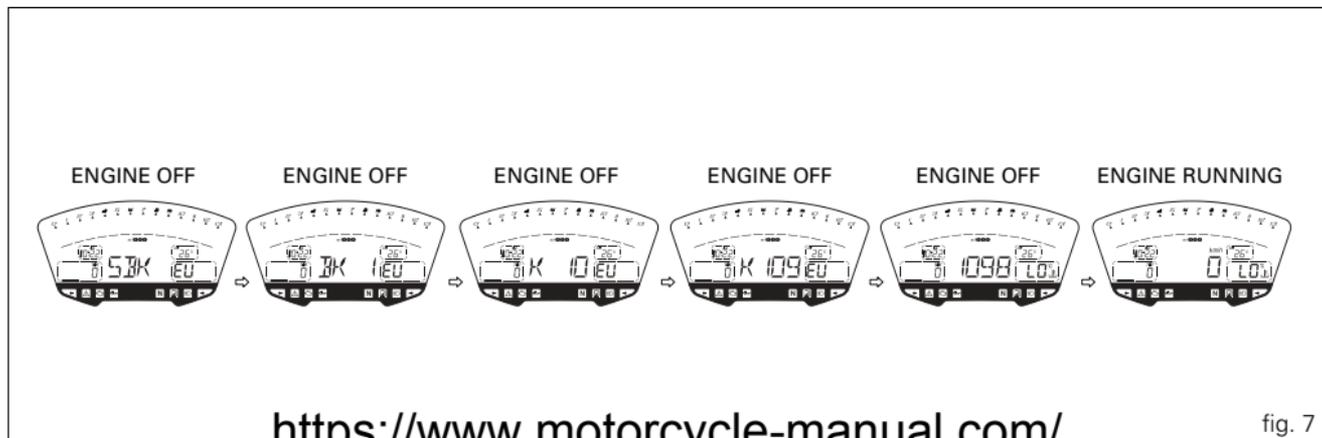


fig. 7

At Key-On, the instrument panel always shows the following information (de-activating any previously activated functions):

**Odometer**

**Air temperature**

**Clock**

**Speed**

**Coolant temperature**

**Engine rpm**

At this point, with button (1, fig. 8) in position B “▼” it is possible to switch from the odometer display function to the following functions:

**TRIP A**

**TRIP B**

**TRIP FUEL** (only if active)

before returning to **TOT** (odometer function).

If, however, you press button (1, fig. 8) in position A “▲”, the system enters MENU mode and displays the following functions in sequence:

**Error** (only if active)

**BATT**

**RPM**

**LAP** (OFF or ON)


**LAP MEM**

**USB** (OFF or ON)

**Erase USB**

**TIME Set**

**CODE** (only if active)

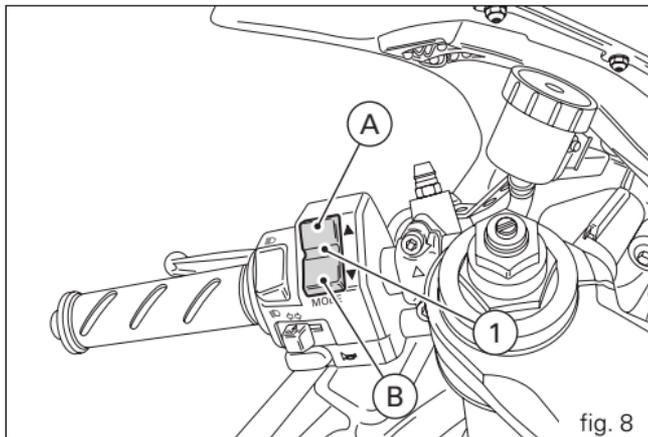


### Important

This menu is active only if the speed of the motorcycle is less than 20 km/h. If this menu is on the display and the speed of the motorcycle exceeds 20 km/h, the instrument panel automatically exits the menu and returns to the initial display. It is possible to exit the menu at any time, however, by pressing button (1, fig. 8) in position A “▲” for 3 seconds.

<https://www.motorcycle-manual.com/>

### Total distance travelled indicator (odometer)

At Key-On the system automatically enters this function. The reading is saved permanently and cannot be reset. If the distance travelled exceeds 99999 km (or 99999 miles), the value "99999" will be displayed permanently.

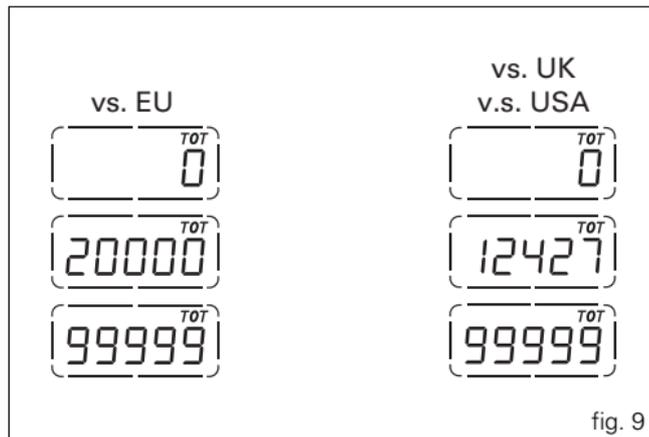

<https://www.motorcycle-manual.com/>

### Trip meter "TRIP A"

While in this function, if you press button (1, fig. 8 in position B "▼" for 3 seconds, the reading is reset. If the reading exceeds 999.9, it is reset to zero and the count restarts automatically.

If the system's units of measurement are changed at any time with the "Setting Special" function, the reading in this function is reset and the count restarts from zero in the newly set unit of measurement.

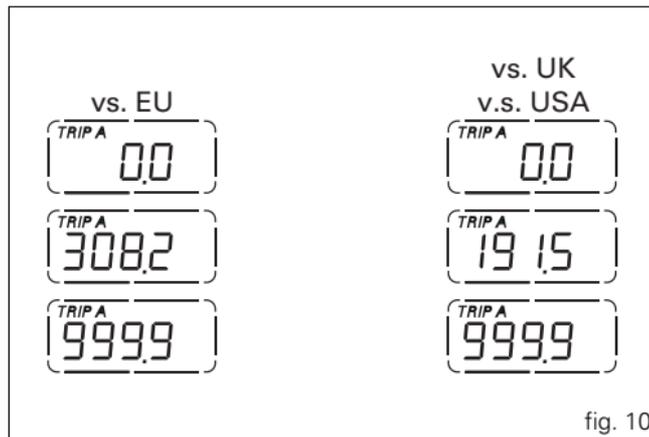


fig. 10

### Trip meter "TRIP B"

While in this function, if you press button (1, fig. 8) in position B "▼" for 3 seconds, the reading is reset. If the reading exceeds 999.9, it is reset to zero and the count restarts automatically.

If the system's units of measurement are changed at any time with the "Setting Special" function, the reading in this function is reset and the count restarts from zero in the newly set unit of measurement.

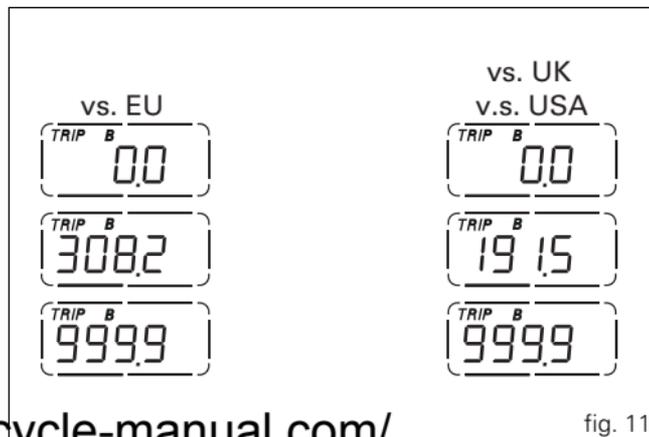


fig. 11

### **“TRIP FUEL” (distance travelled on reserve fuel) indicator**

When the fuel warning light comes on, the TRIP FUEL meter is activated automatically, regardless of the function displayed. If the fuel level remains in reserve, the reading is saved even after Key-Off.

The count stops automatically when the fuel level rises above reserve.

If the reading exceeds 999.9, it is reset and the count restarts automatically.

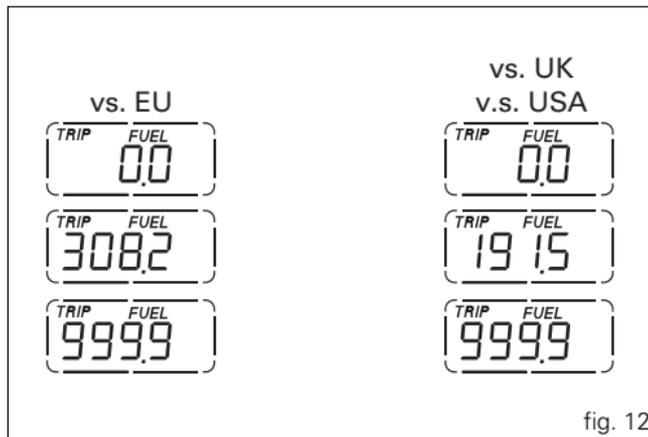


fig. 12

### **Air temperature indicator**

Shows the outside air temperature.

Display limits: -39 °C to +124 °C.

In the event of a sensor FAULT (-40 °C, +125 °C or disconnected) a series of dashes “- - -” is displayed steadily and the Engine Diagnostics warning light (8, fig. 4) comes on.

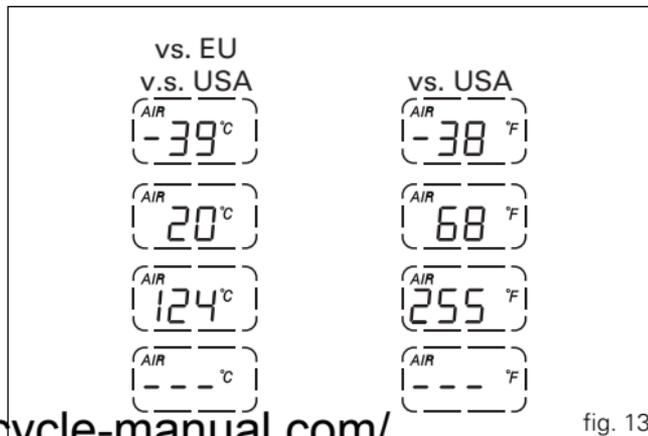


fig. 13

## Coolant temperature indicator

Displays the engine coolant temperature:

if the reading is less than or equal to  $-40^{\circ}\text{C}$  ( $-40^{\circ}\text{F}$ ), the display shows a series of flashing dashes ("—") and the Engine Diagnostics warning light comes on (8, fig. 4);


if the reading is between  $-39^{\circ}\text{C}$  ( $-38^{\circ}\text{F}$ ) and  $+39^{\circ}\text{C}$  ( $+102^{\circ}\text{F}$ ), the message "LO" is displayed steadily;

if the reading is between  $+40^{\circ}\text{C}$  ( $+104^{\circ}\text{F}$ ) and  $+120^{\circ}\text{C}$  ( $+248^{\circ}\text{F}$ ), it is displayed steadily;

if the reading is between  $+121^{\circ}\text{C}$  ( $+250^{\circ}\text{F}$ ) and  $+124^{\circ}\text{C}$  ( $+255^{\circ}\text{F}$ ), the message "HI" flashes on the display;

if the reading is greater than or equal to  $+125^{\circ}\text{C}$  ( $+257^{\circ}\text{F}$ ), the display shows a series of flashing dashes ("—") and the Engine Diagnostics warning light (9, fig. 4) comes on.

In the event of a sensor FAULT, a series of dashes ("—") will flash on the display and the Engine Diagnostics warning light (8, fig. 4) will illuminate.

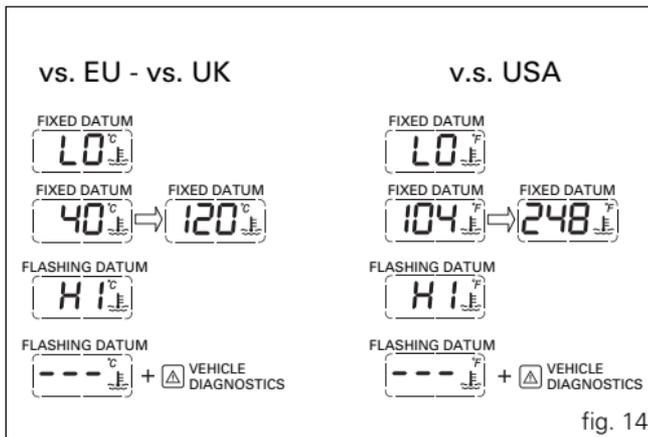

<https://www.motorcycle-manual.com/>

### Service indicator (SERV)

Indicates that the next service is due.

The message "SERV" appears on the display at the following intervals:

after the first 1000 km on the odometer;

every 12000 km on the odometer.

The message is displayed only at Key-On for 5 seconds.

When the message appears, contact your Ducati dealer or Authorized Service Centre.

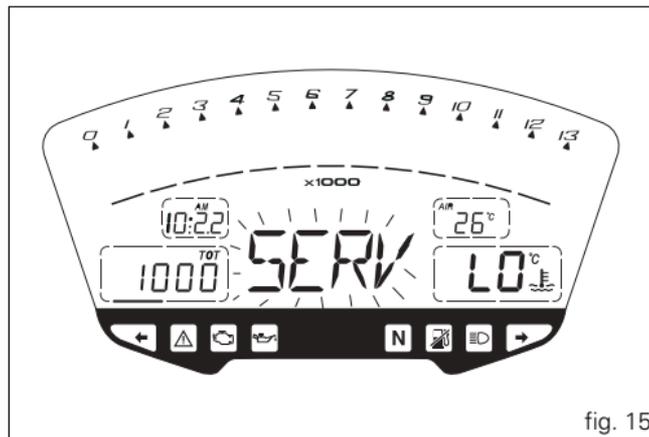


fig. 15

### Battery voltage indicator (BATT)

To display this function, go into the menu and select the "BATT" page.


The battery voltage reading is displayed as follows:

if the reading is between 12.1 and 14.9 Volts, it is steadily illuminated on the display;

if the reading is between 10.0 and 12.0 Volts or between 15.0 and 16.0 Volts, it flashes on the display;

if the reading is less than or equal to 9.9 Volts, the message "LO" flashes on the display and the Motorcycle Diagnostics warning light (9, fig. 4) comes on;


if the reading is greater than or equal to 16.1 Volts, the message "HI" flashes on the display and the Motorcycle Diagnostics warning light (9, fig. 4) comes on;

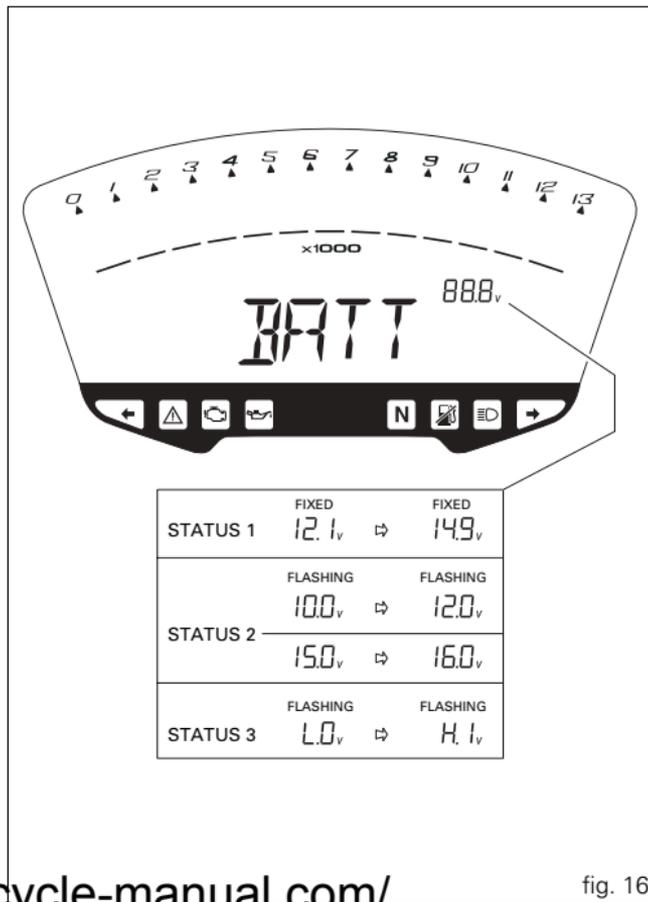

### Adjusting the engine idle speed (rpm)

To display the function, go into the menu and call up the "RPM" page.

In addition to the upper rev counter scale, the display also shows engine rpm numerically so that you can adjust the idle speed more precisely.

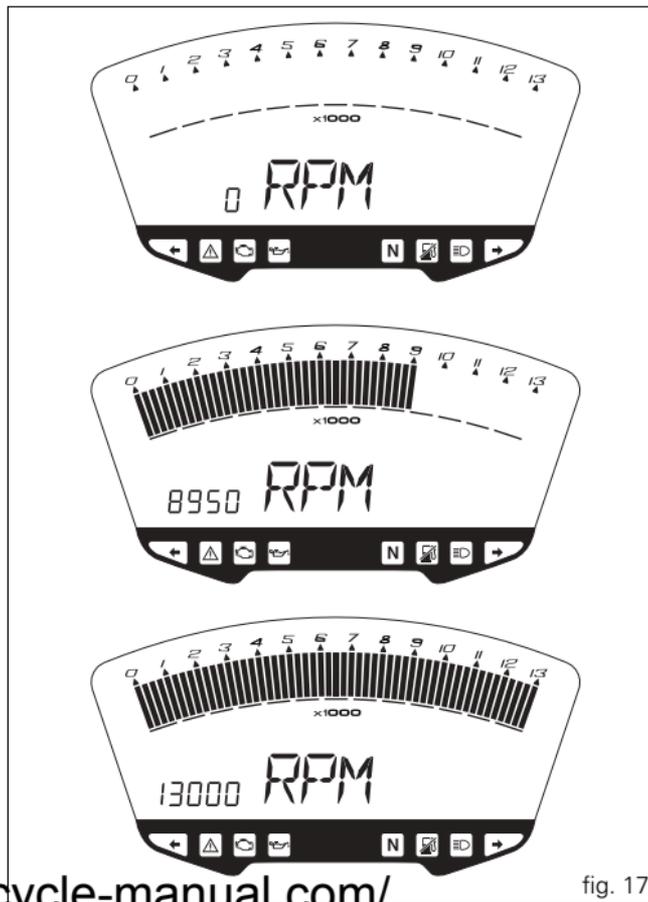

<https://www.motorcycle-manual.com/>

fig. 17

## Lap time display

To activate this function, go into the menu and set the "LAP" function to "On" by keeping button (1, fig. 8) in position B "▼" for 3 seconds.

START and STOP the timer by pressing the high beam FLASH button (12, fig. 5) on the left-hand handlebar switch.

When the LAP function is active, each time you press the FLASH button, the display will show the lap time for 10 seconds, before reverting to normal mode.

You can save a maximum of 30 laps in the memory.

If the memory is full, each time you press the FLASH button, the display will not save any more lap times and will display the flashing message "FULL" for 3 seconds until the memory is reset.

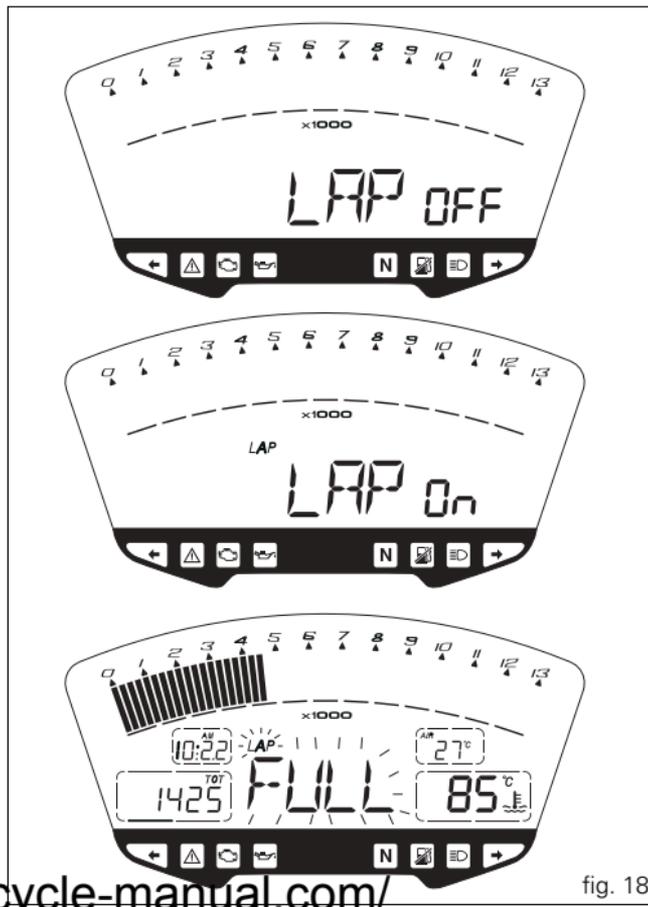



fig. 18

When you switch the LAP function off using the menu, the lap in progress is not saved.  
If the LAP function is active and the display is suddenly switched off (Key-Off), the LAP function is switched off automatically (even if the timer was ON, the lap in progress is not saved).

If the timer is not stopped, when it reaches 99 minutes, 59 seconds and 99 hundredths, it restarts from 0 (zero) and continues until the function is switched off.

If, however, the LAP function is switched on and the memory has not been cleared, but fewer than 30 laps have been saved (e.g. 18 laps), the display will save any remaining laps until the memory is saturated (in this case, it will save a further 12 laps).

In this function, lap time only is displayed, but other data are also saved (MAX speed, MAX rpm, rev limiter if reached) for viewing at a later date in the Lap Memory function.

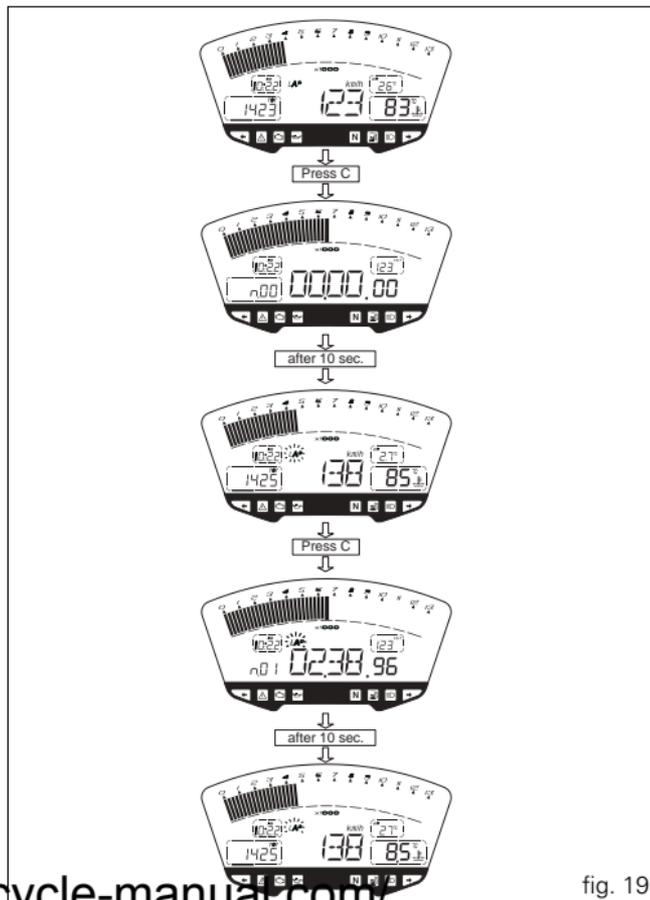

## LAP Memory display

Displays the data saved with the LAP function: lap time, MAX speed and MAX rpm.

To display the saved lap times, go into the menu and select the "LAP MEM" page.

From this page, if you hold button (1, fig. 8) in position B "▼" for 3 seconds, the data for the first lap will appear. The display will show the lap number, lap time, MAX speed and the MAX rpm reached for the lap in question.


If you press the button (1, fig. 8) in position B "▼", the display scrolls through the 30 saved times, before returning to the 1<sup>st</sup> lap.

If you hold button (1, fig. 8) in position B "▼" for 3 seconds while the saved times are displayed, the display immediately resets all the saved times. In this case, if the LAP function was active, it is switched off automatically.

The MAX speed saved is the maximum speed indicated on the display in Lap function.

During saving, if the MAX speed shown exceeds 299 km/h (186 mph), the speed reached is displayed (e.g. 316 km/h). If there is no reading in the memory, the 30 times are shown, with the lap timer showing "00.00.00", MAX rpm = 0 and MAX speed = 0.

During the lap, if the engine reaches one of the two thresholds before the rev limiter or the rev limiter itself, the respective warning lights (10, fig. 4) come on during the display of the saved times.

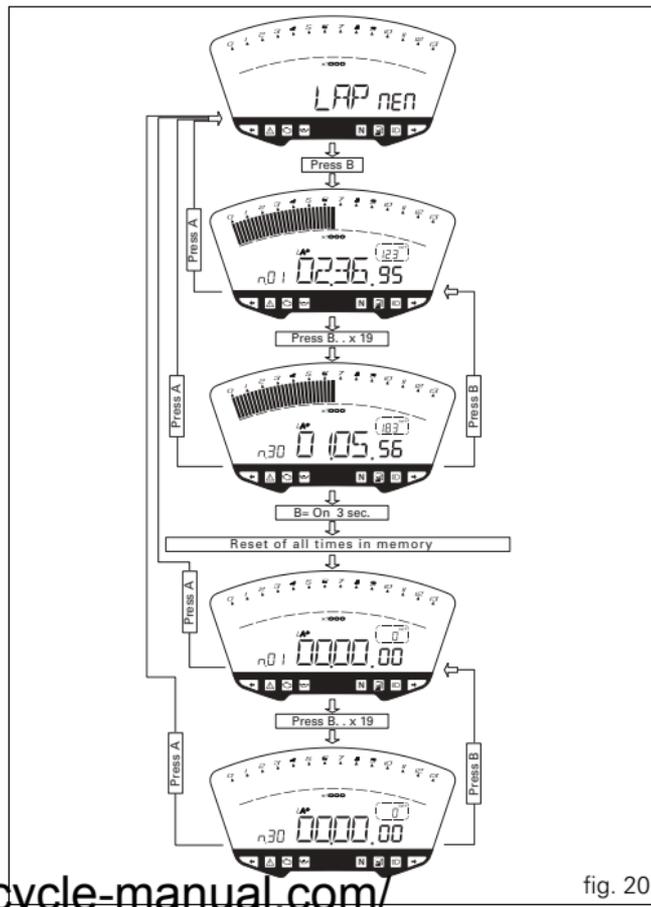

## USB DAQ

This function activates the USB Data Acquisition (DAQ) (see page 66): the DAQ must be connected to the motorcycle wiring.

To activate the DAQ, go into the menu and set the USB DAQ to "On" by holding button (1, fig. 8) in position B "▼" for 3 seconds.

START and STOP the lap separator by pressing the high beam FLASH button (12, fig. 5) on the left-hand handlebar switch.

If the USB function is active and the display is suddenly switched off (Key-Off), the function is switched off automatically.

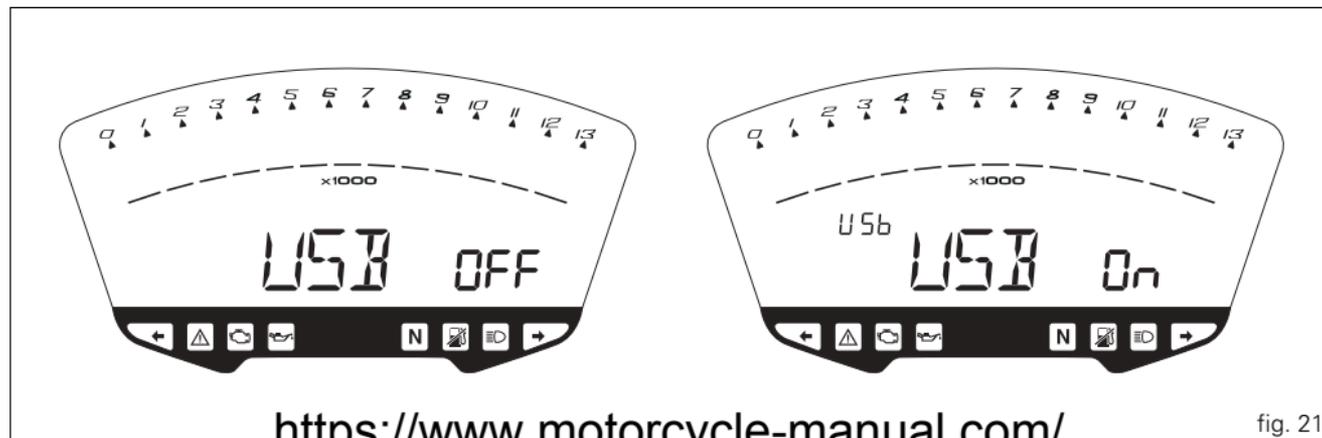


fig. 21


## Erase USB

This function enables you to delete the data saved on the USB DAQ: the DAQ must be connected to the motorcycle wiring.

To delete the data, go into the menu and select the "Erase USB" page.

If you hold the button (1, fig. 8) in position B "▼" for 3 seconds and the USB DAQ is not acquiring data, the message "WAIT..." appears on the display for 10 seconds. After 10 seconds, the message "OK" appears for 2 seconds, to confirm that the data has been deleted.

If you hold the button (1, fig. 8) in position B "▼" for 3 seconds and the USB DAQ is acquiring data, the DAQ memory is not cleared and the display shows the message "ERASE FAIL" for 2 seconds.

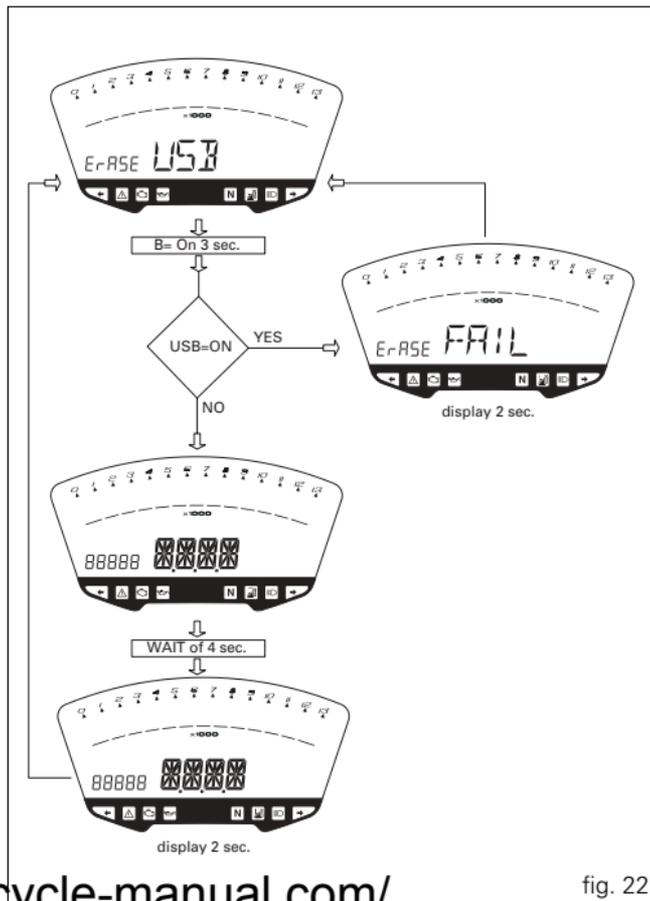

## Clock setting

To set the clock, select the "TIME Set" page from the menu. From this page, if you press button (1, fig. 8) in position B "▼" for 3 seconds, you enter clock setting mode.

On entering this function, the message "AM" flashes on the display; if you press button (1, fig. 8) in position B "▼", the message "PM" flashes on the display; pressing button (1, fig. 8) in position B "▼" as second time returns you to the previous step (if the time is 00:00, when you switch from AM to PM the time 12:00 will appear);

if you press the button (1, fig. 8) in position A "▲", you can set the hours, which start flashing. Each time you press the button in position B "▼", the count advances cyclically in steps of 1 hour; if you hold the button down in position B "▼", the count advances cyclically in steps of 1 hour every second (when the button is held down continuously, the hours do not flash).

If you press button (1, fig. 8) in position A "▲", you enter the minutes setting mode and the minute digits will start flashing. Each time you press the button in position B "▼", the count advances cyclically in steps of 1 minute; if you hold the button down in position B "▼", the count advances cyclically in steps of 1 minute every second. If the button is held pressed in position B "▼" for more than 5 seconds, the minutes advance by 1 every 100 ms (when the button is held in position B "▼" continuously, the seconds do not flash). If you switch the button to position A "▲", the system exits setting mode and displays the newly set time.

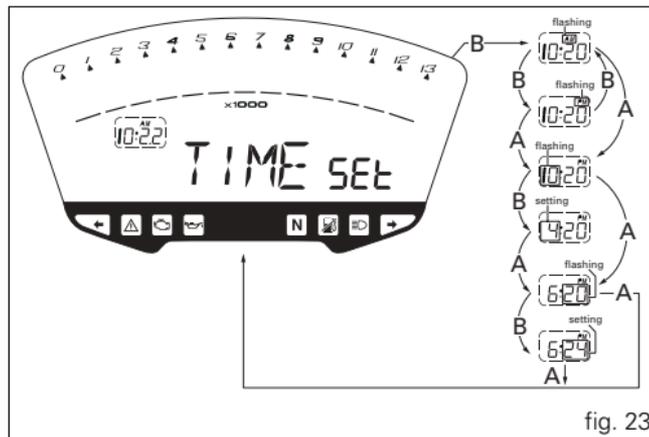


fig. 23

## Instrument panel diagnostics

### Important

The instrument runs the system diagnostics correctly 60 seconds after the last Key-Off.

**E** Any errors detected in the behaviour of the motorcycle are displayed.

If there are several errors, they are displayed in rolling mode every 3 seconds.

The table below shows the errors that can be displayed.



### Warning

Every time an error is displayed, always contact an authorized Ducati Service Centre.

Warning light	Error message	Error
	COIL	10.1 Horizontal cylinder coil error
	COIL	10.2 Horizontal cylinder coil error
	COIL	11.1 Vertical cylinder coil error
	COIL	11.2 Vertical cylinder coil error
	INJE	12.1 Horizontal cylinder injector error
	INJE	12.2 Horizontal cylinder injector error

<https://www.motorcycle-manual.com/>

Warning light	Error message	Error	
	INJE	13.1	Vertical cylinder injector error
	INJE	13.2	Vertical cylinder injector error
	PUMP	16.0	Fuel pump relay error
	FAN	18.1	Fan relay error
	FAN	18.2	Fan relay error
	STRT	19.1	Starter contactor error
	STRT	19.2	Starter contactor error
	STEP.	21.1	Stepper motor error
	STEP.	21.2	Stepper motor error
	STEP.	21.3	Stepper motor error
	LAMB.	22.1	Lambda heater error

E

Warning light	Error message		Error
	LAMB.	22.2	Lambda heater error
	EXVL	23.1	Exhaust valve motor error
	EXVL	23.2	Exhaust valve motor error
	EXVL	23.3	Exhaust valve motor error
	EXVL	23.4	Exhaust valve motor error
	EXVL	23.5	Exhaust valve motor error
	TPS	1.1	Throttle position sensor error
	TPS	1.2	Throttle position sensor error
	PRESS	2.1	Pressure sensor error
	PRESS	2.2	Pressure sensor error
	T.WAT	3.1	Engine coolant temperature sensor error

<https://www.motorcycle-manual.com/>

Warning light	Error message	Error	Error
	T.WAT	3.2	Engine coolant temperature sensor error
	AIR	4.1	Air temperature sensor error
	AIR	4.2	Air temperature sensor error
	BATT	5.1	Battery voltage error
	BATT	5.2	Battery voltage error
	LAMB	6.1	Lambda sensor error
	TILT	6.2	Lambda 2 sensor error
	DTC	8.0	Traction control unit error (the error can only occur if the bike has been fitted with the traction control kit available from Ducati performance)
	ECU	30.0	Engine ECU error
	PK.UP	34.0	Pick-up sensor error
	SPEE.	36.0	Speed sensor error

<https://www.motorcycle-manual.com/>

Warning light	Error message		Error
	IMMO	37.0	Immobilizer error
	IMMO	37.1	Immobilizer error
	IMMO	37.3	Immobilizer error
	IMMO	37.4	Immobilizer error
	IMMO	37.5	Immobilizer error
	CAN	38.0	CAN line error

<https://www.motorcycle-manual.com/>

## Display backlight

The instrument panel backlighting is activated on only when the parking lights or low/high beam headlight are on.

The instrument panel has sensors that measure ambient temperature and light intensity, and automatically turns the backlighting on or off accordingly.

## Intelligent headlight switch-off

This function helps reduce battery use by automatically switching off the headlight. The device is triggered in 3 cases:

- in the first case, if you turn the key from **OFF** to **ON** and do not start the engine within 60 seconds, the headlight is turned off and will be turned on again only when the engine is next switched on.
- in the second case, after the normal use of the motorcycle with the lights on, if the engine is stopped using the **RUN-STOP** on the right-hand handlebar switch. In this case, the headlamp is switched off 60 seconds after the engine is switched off, and only switched on again the next time the engine is started.
- in the third case, the headlight is switched off while the engine is being started and switched back on again when the engine is running.

## Intelligent headlamp switch-on

This function allows programmed activation of the headlight even with the motorcycle off (Key-Off).

Immediately after key-off, the instrument panel remains active for 60 seconds, thus allowing the headlight to be switched on if the button (1, fig. 8) is switched to position B “▼”.

During these 60 seconds, each time the button (1, fig. 8) is pressed in position B “▼”, the instrument panel will activate the headlight for 30 seconds; each press of button (1, fig. 8) in position B “▼” will add to the headlight activation time, up to a maximum of 6 presses (equivalent to a maximum activation time of 180 seconds).

The first time you press the button (1, fig. 8) in position B “▼”, the 30 second period starts, thus switching on the headlight. Further switch-on time can be added only if you press the button again within these 30 seconds. If the 30 second period has elapsed, no further multiples of 30 seconds can be added, and the instrument panel will switch off the headlight.

To reset this function, you must perform at least one Key-On/Key-Off.

If the battery power is interrupted at any time while this function is active, when power is restored, the instrument panel will de-activate the function (the instrument panel does not remain active for 60 seconds).

## The immobilizer system

For additional anti-theft protection, the motorcycle is equipped with an IMMOBILIZER, an electronic system that locks the engine automatically whenever the ignition switch is turned off.

The grip of each ignition key contains an electronic device that modulates the output signal from a special antenna in the switch when the ignition is switched On. The modulated signal represents the "password" (which is changed at each start-up) by which the ECU recognizes the ignition key. The ECU will only allow the engine to start if it recognises this password.

### Keys (fig. 24)

The owner receives a set of keys, comprising:

- 2 black keys (B)

These contain the "code" of the immobilizer system.



### Notes

Your Ducati dealer may ask you to produce your Code Card in order to carry out certain servicing operations.


The black keys (B) are the keys for normal use, and are used to:

- start the engine;
- open the lock on the fuel tank filler cap;
- open the seat lock.



### Notes

The two keys have a small tag (1) attached, which shows their identification number.

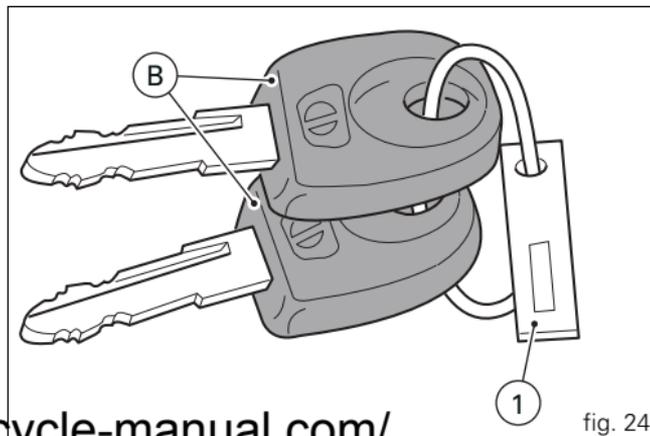

## Warning

Keep the keys separate, and store the tags (1) in a safe place.

It is also advisable to use only one of the black keys to start the motorcycle.

## Code card

A CODE CARD (fig. 25) is supplied with the keys. This shows the electronic code (A, fig. 26) that must be used if the engine is locked by the immobilizer and consequently does not start when the key is turned to **ON**.

## Warning

Keep the CODE CARD in a safe place. We advise the user to keep the code printed on the CODE CARD on his/her person at all times in order to be able to override the engine lock using the procedure described below, in the event of a malfunction of the immobilizer system, signalled by illumination of the amber diagnostic light (9, fig. 4).

This operation is only possible if the electronic code indicated on the code card is known.

## Warning

Your dealer will ask you to produce the Code Card in order to re-program or replace a key.

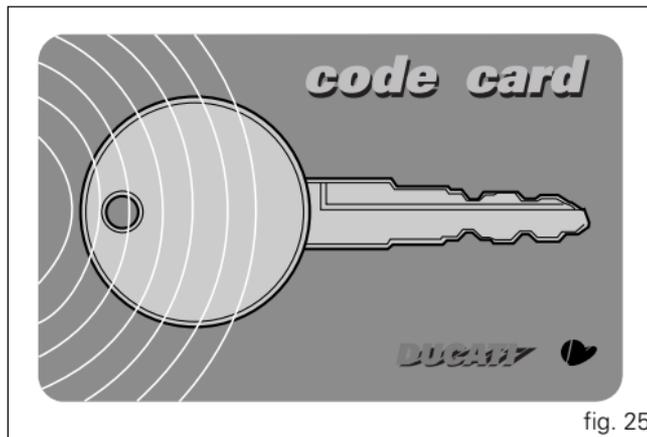


fig. 25

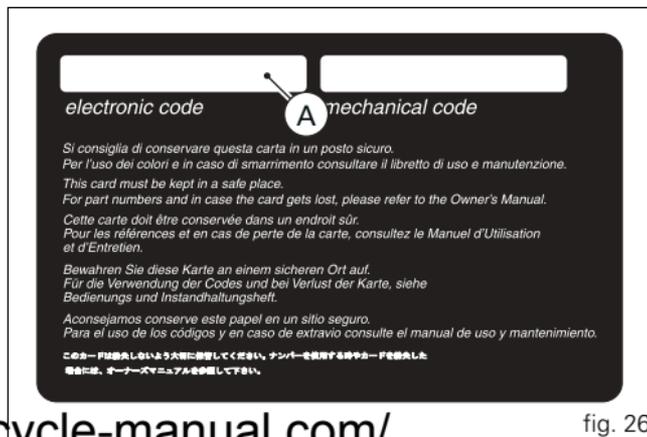


fig. 26


## Immobilizer override procedure

Should the immobilizer become locked, you can perform the "Immobilizer Override" procedure from the instrument panel by entering the respective function as follows: Select the "CODE" page from the menu.

### Notes

This menu should be active only if there is at least one immobilizer error.

With this page selected, the initial code is always displayed as "00000". If you hold the button (1, fig. 8) in position B "▼" for 3 seconds, you will access the procedure for entering the electronic code given on the Code Card.

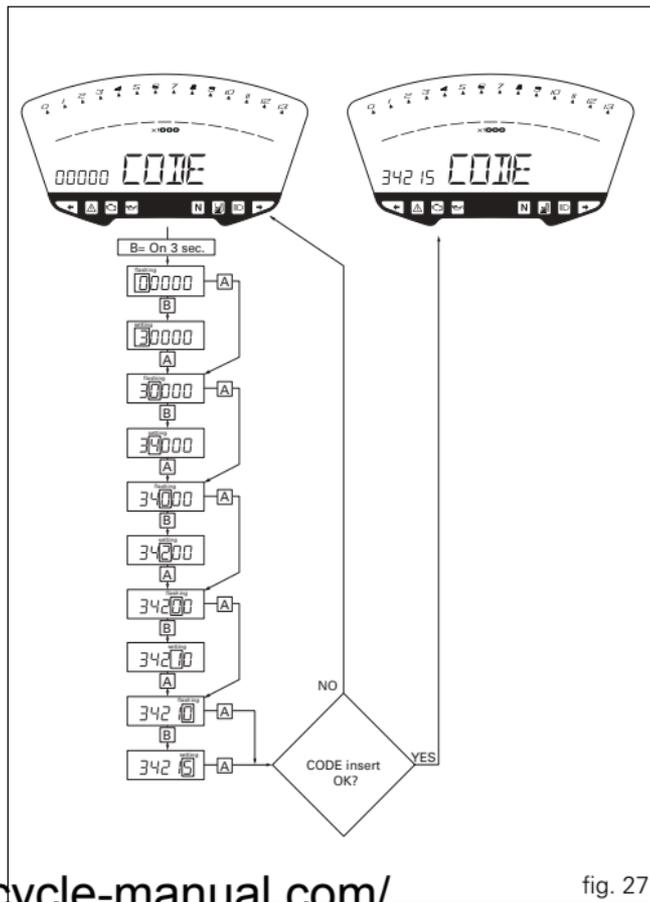

Entering the code:

on entering this function, the first digit on the left starts flashing.

Button (1, fig. 8):

each time you press the button in position B "▼", the number increases cyclically in steps of one digit every second.

If you press the button in position A "▲", you can set the second digit, which will start flashing. Each time you press the button in position B "▼", the number increases cyclically in steps of one digit every second.

If you press the button in position A "▲", you can set the third digit, which will start flashing. Each time you press the button in position B "▼", the number increases cyclically in steps of one digit every second.

If you press in position A "▲", you can set the fourth digit, which will start flashing. Each time you press the button in position B "▼", the number increases cyclically in steps of one digit every second.

If you press the button in position A "▲", you can set the fifth digit, which will start flashing. Each time you press the button in position B "▼", the number increases cyclically in steps of one digit every second.

Press in position A "▲" to confirm the code.

If the code has been entered correctly, the message CODE and the code itself will flash simultaneously for 4 seconds.

The motorcycle diagnostics warning light (9, fig. 4) will go off. The instrument panel then automatically exits the menu, thus allowing "temporary" starting of the motorcycle.

If the error persists, at the next key-on, the instrument panel will return to an error state and immobilize the engine.

If the code has been entered incorrectly, however, the instrument panel will automatically return to the "CODE" menu and display the code "00000".

## Operation

When the ignition key is turned from ON to OFF, the immobilizer system activates the engine lock. When the ignition key is turned from OFF to ON to start the engine:

1) if the code is recognised, the protection system releases the engine lock. When you press the START (2, fig. 31) button, the engine will start up.

2) if the motorcycle diagnostics warning light (9, fig. 4) comes on and if, when you press the button (1, fig. 8) in the “▼” position, the “Error IMMO” message appears on the display, indicating that the code has not been recognised. In this case, turn the ignition key back to OFF and then to ON again. If the engine still does not start, try again with the other black key. If the engine still does not start, contact the Ducati Service network.



## Warning

Sharp knocks can damage the electronic components inside the key.

Always use the same key during the procedure. Using different keys could prevent the system from recognising the code in the key.

## Duplicate keys

If you need additional keys, contact your Ducati Service Centre with all the keys you have in your possession and your CODE CARD.

The Ducati Service Centre will program all the new keys as well as any keys you already have.

You may be asked to provide proof that you are the legitimate owner of the motorcycle.

The codes for any keys not present during the memory programming procedure are cancelled, to ensure that any keys that may have been lost can no longer be used to start the engine.



## Notes

If you sell your motorcycle, do not forget to pass on all the keys and the CODE CARD to the new owner.

<https://www.motorcycle-manual.com/>



## Ignition switch and steering lock (fig. 28.1 and fig. 28.2)

This is located in front of the fuel tank and has four positions:

- A) **ON**: enables lights and engine operation;
- B) **OFF**: disables lights and engine operation;
- C) **LOCK**: the steering is locked;
- D) **P**: parking light on and steering locked.

### Notes

To turn the key to the last two positions, push it in before turning. The key can only be removed in positions (B), (C) and (D).

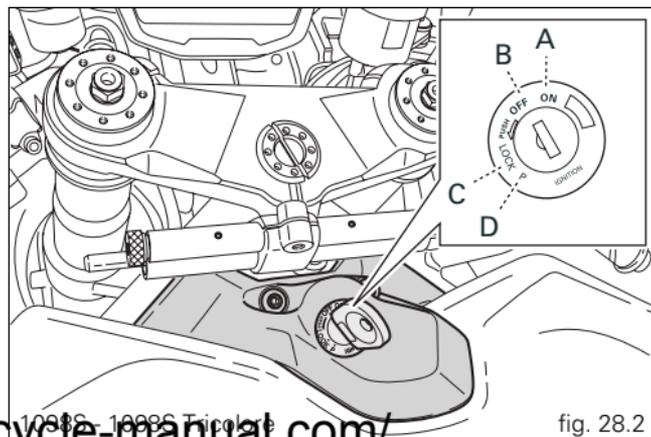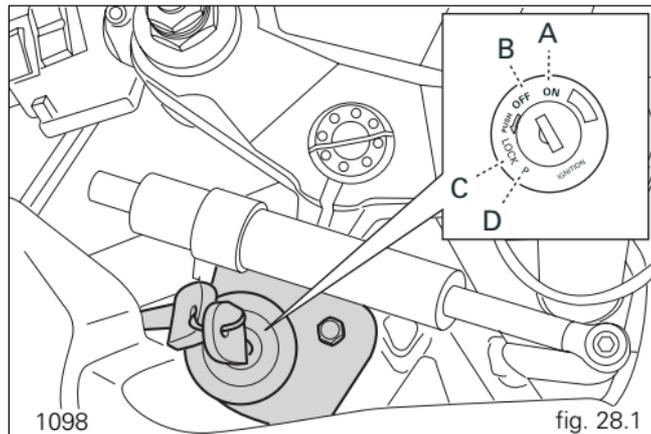

## Left-hand handlebar switch (fig. 29)

1) Dip switch, two-position light selector switch:

position  = low beam headlight on;

position  = high beam headlight on.

2) Button  = three-position turn signal:

centre position = off;

position  = left turn;

position  = right turn.

To cancel the indicator, press the lever once it has returned to the central position.

3) Button  = horn.

4) Button  = high beam flash and instrument panel control.

5) Two-position instrument panel control button:

position ;

position .

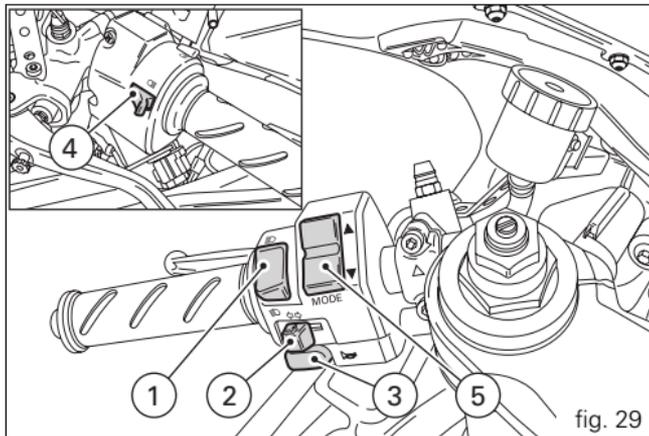


fig. 29

## Clutch lever

The lever (1) disengages the clutch. The span adjuster (2) serves to alter the distance of the lever from the handlebar. The lever distance can be adjusted through 10 clicks of the knob (2). Turn the knob clockwise to move the lever away from twistgrip, or counter clockwise to move it closer. When the clutch lever (1) is operated, drive from the engine to the gearbox and the rear wheel is disengaged. Correct use of the clutch lever is very important in all riding situations, especially when moving off.



### Warning

Any adjustment of clutch lever must be carried out when motorcycle is stationary.




### Important

Using the clutch properly will prolong the life of the engine and prevent any damage to components in the transmission.



### Notes

The engine can be started with the sidestand down and the gearbox in neutral. When starting the engine with a gear engaged, pull in the clutch lever (in this case the sidestand must be in the raised position).

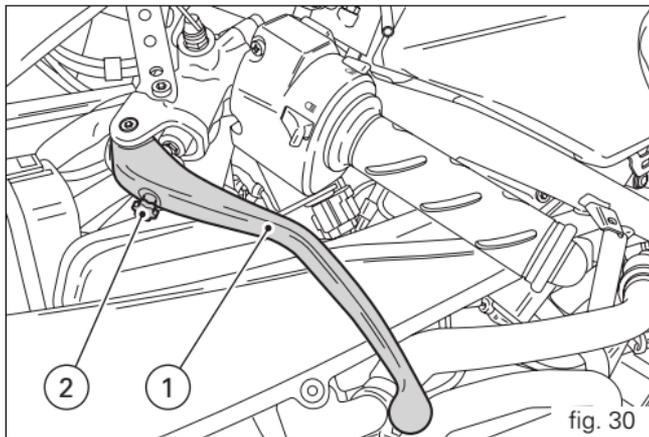

## Right-hand handlebar switch (fig. 31)

1) Two-position **ENGINE STOP** switch

position  (**RUN**) = run;

position  (**OFF**) = stop engine.



### Warning

This switch is mainly intended for use in emergencies when you need to stop the engine quickly. After stopping the engine, return the switch to the  position to start the engine.




### Important

After travelling with the lights on, if the engine is switched off using switch (1) and the ignition key is left in the **ON** position, the battery can be drained since the headlamp remains on.

2) Button  = engine start

## Throttle twistgrip (fig. 31)

The twistgrip (3) on the right handlebar opens the butterfly valves in the throttle body. When released, the twistgrip returns automatically to the initial position (idling speed).

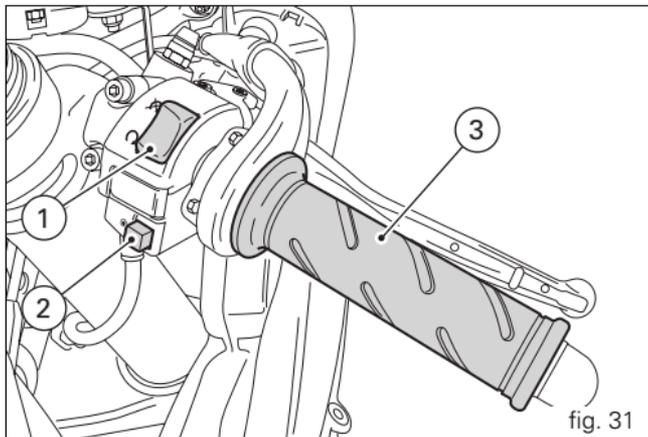

## Front brake lever (fig. 32)

Pull the lever (1) towards the twistgrip to operate the front brake. The system is hydraulically assisted and you only need to pull the lever gently.

The brake lever has a knob (2) for adjusting the distance between lever and twistgrip on the handlebar.

The lever distance can be adjusted through 10 clicks of the knob (2). Turn the knob clockwise to move the lever away from twistgrip, or counter clockwise to move it closer.

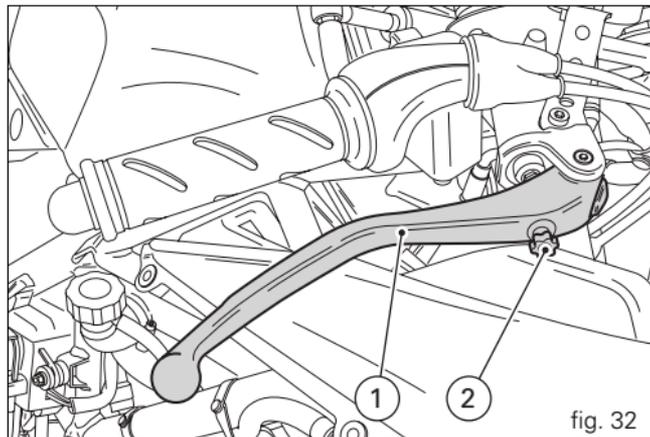


fig. 32

E

### Rear brake pedal (fig. 33)

Push down on the pedal (1) with your foot to operate the rear brake.

The system is controlled hydraulically.

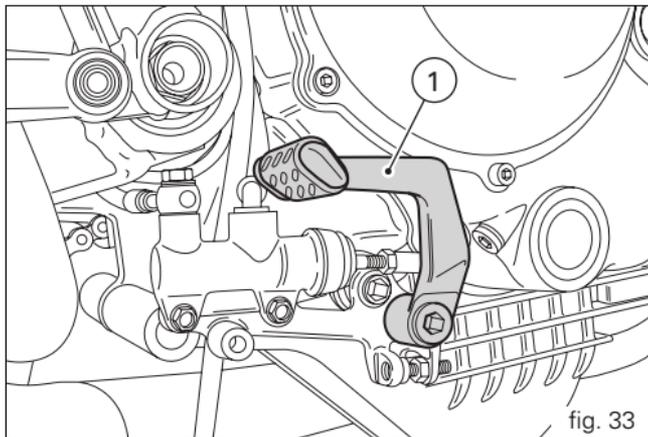


fig. 33

### Gearchange pedal (fig. 34)

The gearchange pedal automatically returns to its central rest position N. When the pedal is in this position, the N light (3, fig. 4) on the instrument panel comes on.

The pedal can be moved:

downwards = push down on the pedal to engage 1<sup>st</sup> gear and to shift down. At this point the N light on the instrument panel will go off;

upwards= lift the pedal to engage 2<sup>nd</sup> gear and then 3<sup>rd</sup>, 4<sup>th</sup>, 5<sup>th</sup> and 6<sup>th</sup> gears.

Each time you move the pedal you engage the next gear, one gear at a time.

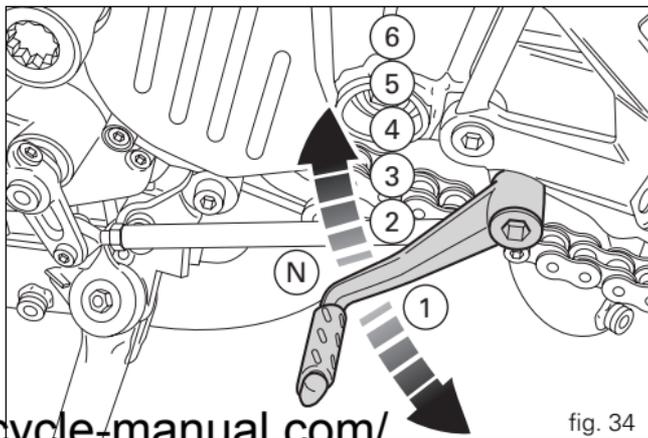


fig. 34

<https://www.motorcycle-manual.com/>

## Adjusting the position of the gearchange and rear brake pedals (fig. 35 and fig. 36)

The position of the gearchange and rear brake pedals in relation to the footrests can be adjusted to suit the requirements of the rider.


To adjust the position, proceed as follows:  
restrain the tie-rod (1) and slacken the locknuts (2) and (3).



### Notes

The locknut (2) has a left-hand thread.

Turn the tie-rod (1) using an open-ended wrench on the flats to move the gearchange pedal to the required position.  
Tighten both nuts on to the rod.

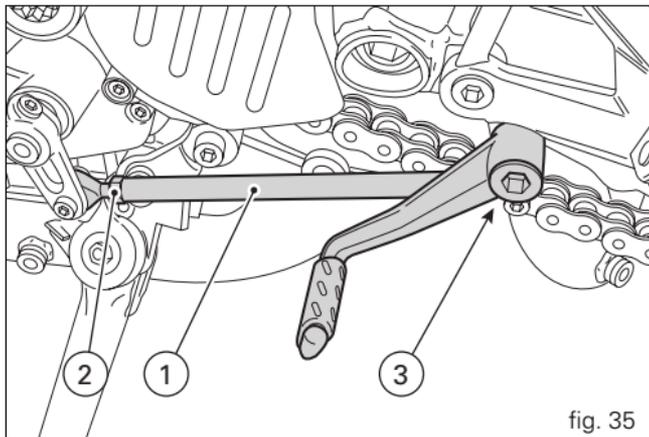

E

To adjust the position of the rear brake pedal, proceed as follows:

Loosen the locknut (4).

Turn the pedal travel adjustment bolt (5) until the pedal is in the desired position.

Tighten the locknut (4) to a torque of 2.3 Nm.


Operate the pedal by hand to check that there is 1.5 to 2 mm of freeplay before the brake bites.

If not, adjust the length of the master cylinder pushrod as follows.

Slacken off the locknut (6) on the pushrod.

Screw the rod into the clevis (7) to increase play, or unscrew it to reduce play.


Tighten the lock nut (6) to a torque of 7.5 Nm and re-check the free play.

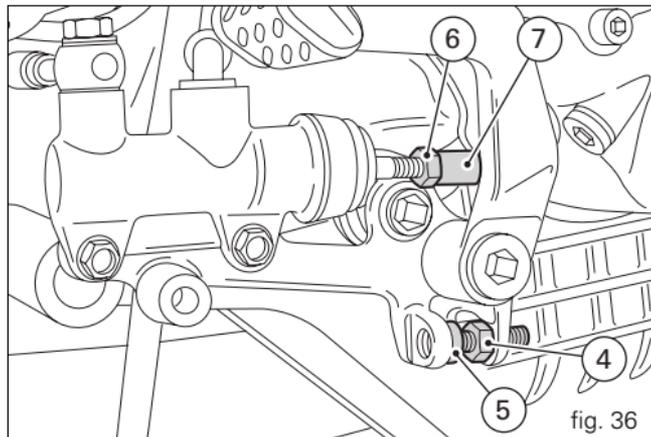

# Main components and devices

## Position on motorcycle (fig. 37)

- 1) Fuel tank filler cap.
- 2) Seat lock.
- 3) Sidestand.
- 4) Steering damper.
- 5) Rearview mirrors.
- 6) Front fork adjusters.
- 7) Rear shock absorber adjusters.
- 8) Suspension tie-rod for adjustment of rear ride height.
- 9) Exhaust silencer (see note on page 66).
- 10) Catalytic converter.

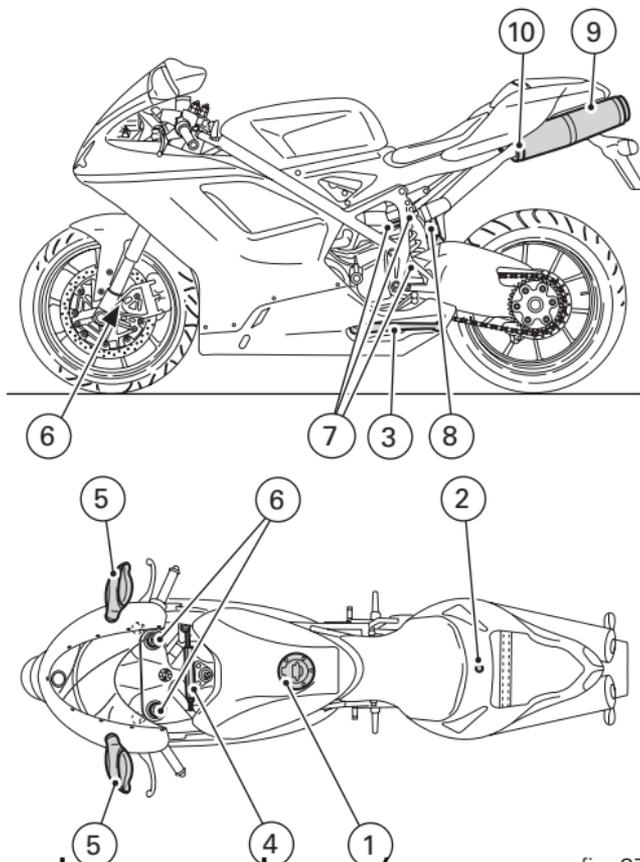

<https://www.motorcycle-manual.com/>

fig. 37

## Fuel tank filler cap (fig. 38)

### Opening

Raise the cover (1) and insert the key into the lock. Give the key a 1/4 turn clockwise to unlock.

Lift the cap.

E

### Closing

Close the cap with the key inserted and push it into its seat. Turn the key anticlockwise to the initial position and remove it. Replace the lock cover (1).




### Notes

The cap can only be closed with the key inserted.



### Warning


Always make sure you have properly closed the fuel filler cap after refuelling (see page 67).

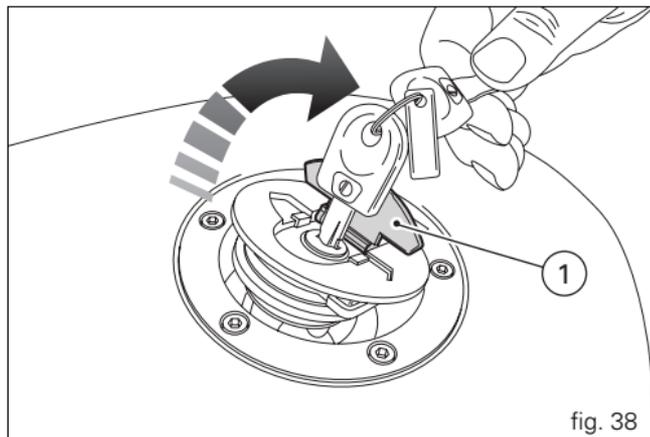

## Seat lock


### Opening (fig. 39)

Insert the key into the seat lock (1) and turn it clockwise until the seat catch disengages with an audible click. Raise the rear of the seat (2) until it can be extracted.

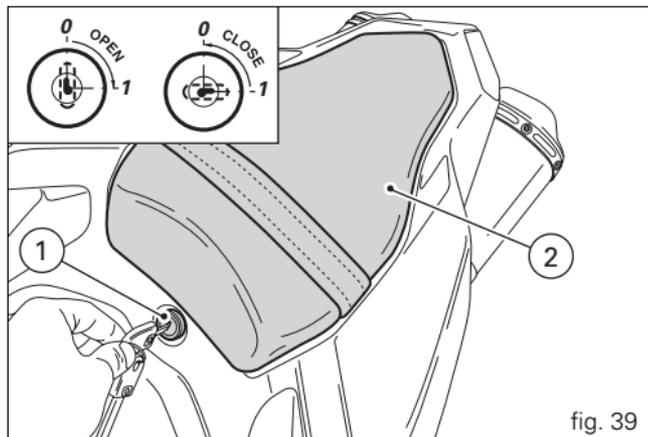

### Closing (fig. 40)

Fit the hooks on the base of the seat under the rear subframe. Press down on the pillion seat until you hear the catch engage with an audible click. Make sure that the pillion seat is properly secured by gently pulling it upwards.

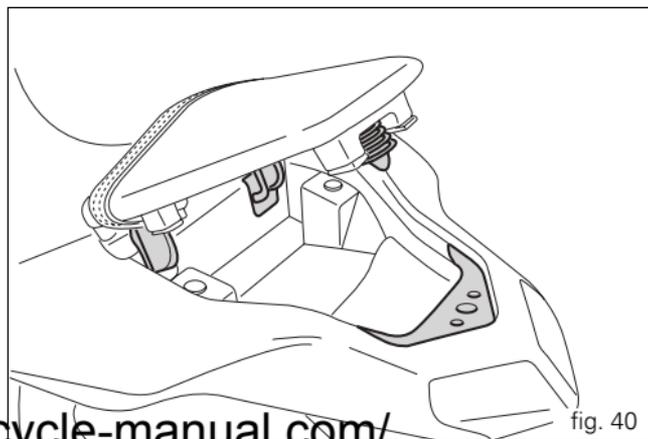

## Sidestand (fig. 41)

### Important

Before lowering the sidestand, check that the ground is sufficiently even and firm.

E

Do not park on soft ground, gravel or on asphalt softened by the sun etc. or the motorcycle may fall over.

When parking on a slope, always park with the rear wheel on the downhill side.

To lower the sidestand, hold the motorcycle handlebars with both hands and, with your foot, push down the stand (1) until fully extended. Tilt the motorcycle until the sidestand is resting on the ground.

### Warning

Do not sit on the motorcycle when it is supported on the sidestand.

To raise the sidestand to rest position (horizontal), tilt the motorcycle to the right and, at the same time, lift the stand (1) with your foot.

### Notes

It is advisable to check periodically that the stand mechanism (consisting of two springs, one inside the other) and safety sensor (2) are working properly.

### Notes

The engine can be started with the sidestand down and the gearbox in neutral. If starting with a gear engaged, pull in the clutch lever (in this case the sidestand must be up).

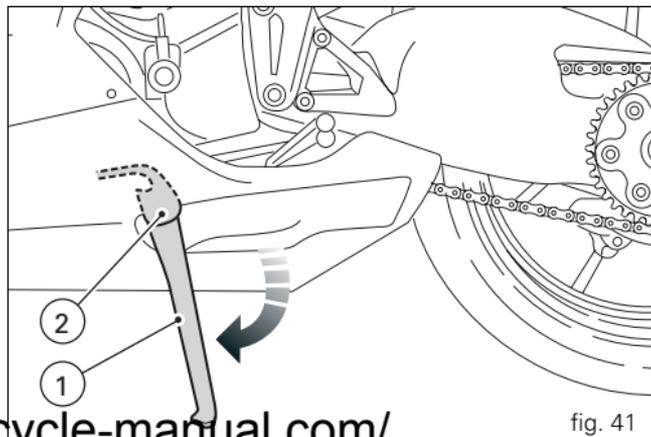


fig. 41

<https://www.motorcycle-manual.com/>

## Steering damper (fig. 42 and fig. 43)

The steering damper is located in front of the tank and secured to the frame and the top yoke.

The damper helps improve steering precision and stability, and thus also improves ride quality in all riding conditions.



### (1098S - 1098S Tricolore)

Turn the knob (1) clockwise to obtain a stiffer damping action or anticlockwise to soften it.

Each adjustment position is identified by a click.



**Warning (1098S - 1098S Tricolore)**  
Never attempt to adjust the knob (1) while riding, or you may lose control of the motorcycle.

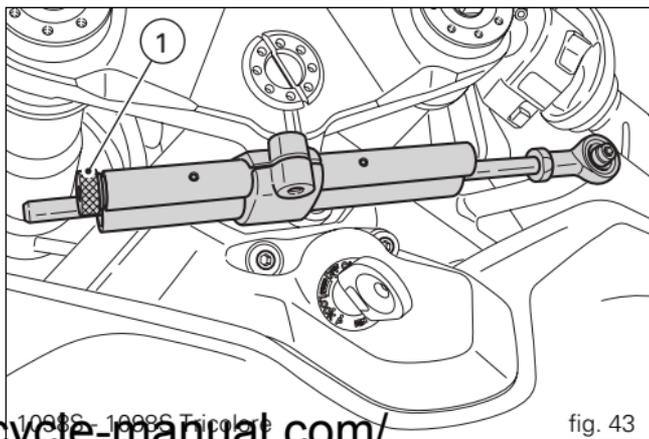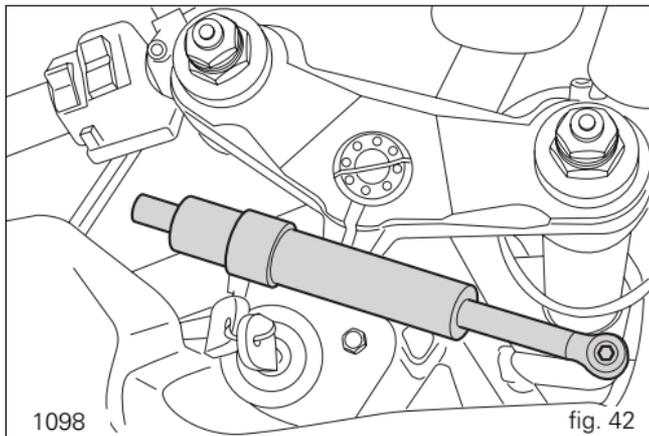

## Front fork adjusters

The front fork can be adjusted for rebound, compression and spring preload.

The settings are adjusted by way of external adjuster screws:

- 1) to adjust rebound damping (fig. 44.1 and fig. 44.2);
- 2) to adjust inner spring preload (fig. 44.1 and fig. 44.2);
- 3) to adjust compression damping (fig. 45.1 and fig. 45.2).

Park the motorcycle in a stable position on its sidestand.

To adjust the rebound damping setting, turn the adjuster (1) on the top of each fork leg with a flat-blade screwdriver (1098) or the special wrench (1098 - 1098S Tricolore).

As you turn the adjusting screws (1 and 3), you will hear them click. Each click identifies a setting. The stiffest damping setting is obtained with the adjuster turned fully clockwise to the "0" position. Start with this position and turn counterclockwise. Count the screw clicks, which correspond to position "1", "2" and so forth.

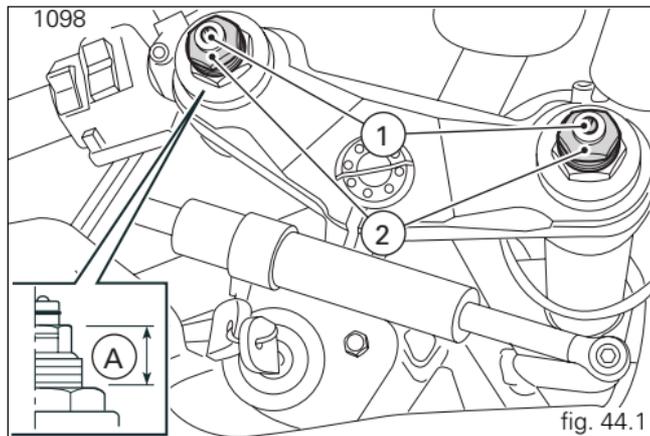


fig. 44.1



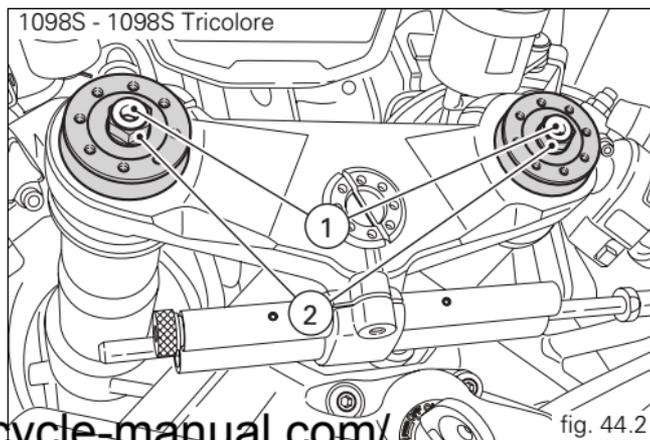


fig. 44.2

The STANDARD factory settings are as follows:  
compression:  
3/4 turns (1098),  
8 clicks (1098S - 1098S Tricolore);  
rebound:  
12 clicks (1098),  
10 clicks (1098S - 1098S Tricolore);  
Spring preload (1098)(A, fig. 44.1): 18 mm;  
corresponds to an actual preload of 9 mm.  
Spring preload (1098S - 1098S Tricolore); starting with the  
adjuster screwed FULLY OUT, screw it in clockwise 8 turns;  
corresponds to an actual preload of 8 mm.

To change the preload on the inner spring for each fork leg,  
turn the adjuster with the hex end (2, fig. 44.1 and fig. 44.2)  
with a 22 mm hex wrench.

 **Important**  
Adjust both fork legs to the same setting.

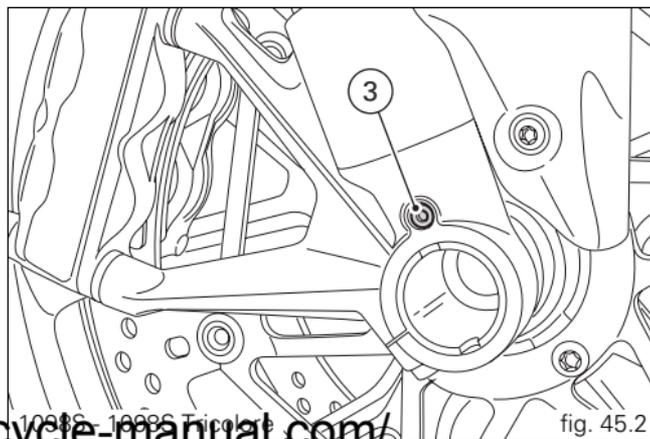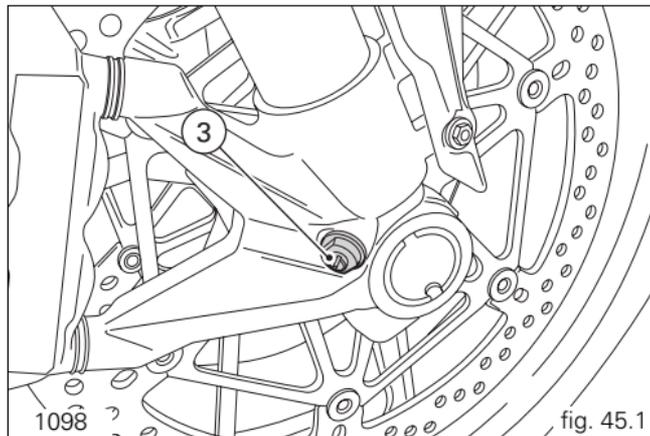

## Shock absorber adjusters (fig. 46.1 and fig. 46.2)

The shock absorber has external adjusters that enable you to adjust the suspension to suit the load on the motorcycle. Adjuster (1), located on the left-hand side at the point at which the shock absorber is fixed to the swingarm, controls rebound damping.

The adjuster (2) on the shock absorber reservoir controls compression damping.

Turn the adjusters (1 and 2) clockwise to stiffen the damping or anti-clockwise to soften it.

(1098)

STANDARD setting:

from the fully closed position (turned fully clockwise), unscrew:

adjuster (1) by 2 turns

adjuster (2) by 2 turns.

Spring preload: 28 mm.

(1098S - 1098S Tricolore)

STANDARD setting:



from the fully closed position (turned fully clockwise), unscrew:

adjuster (1) by 10 clicks;

adjuster (2) by 10 clicks;

Spring preload: 23 mm.

The two nuts (3) on the upper part of the shock absorber serve to adjust the preload on the external spring. To change spring preload, slacken off the upper lock nut. Then **tighten** or **loosen** the lower nut to **increase** or **decrease** spring preload as required.

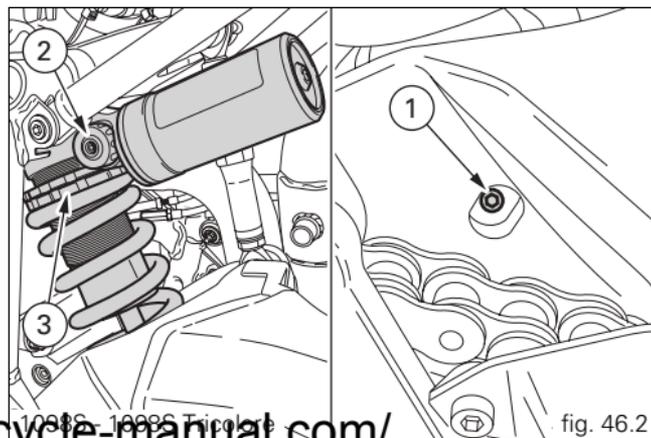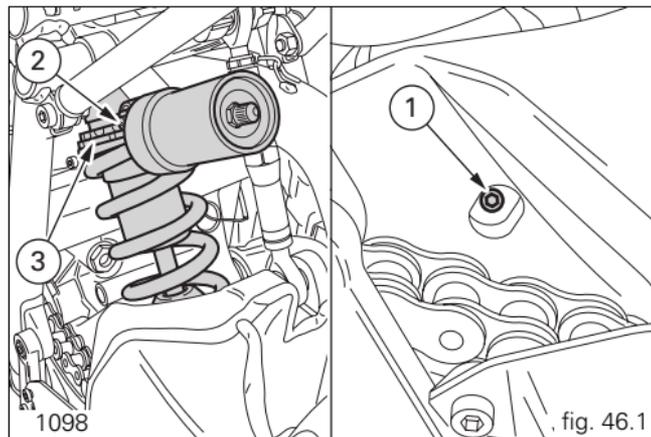

Once the desired spring preload has been set, re-tighten the upper lock nut.



### Warning

Use a pin wrench to turn the preload adjusting nut. Take special care when turning the nut, to avoid injuring your hand by striking it violently against other parts of the motorcycle if the wrench suddenly slips off the nut while turning.



### Warning

The shock absorber is filled with gas under pressure and may cause severe damage if taken apart by unskilled persons.

If you plan to carry a passenger and luggage, adjust the rear shock absorber spring load to the maximum setting to improve the handling characteristics of the motorcycle and to avoid the possibility of ground contact. It may also be necessary to adjust the rebound damping accordingly.

<https://www.motorcycle-manual.com/>

## Adjusting the rear ride height (fig. 47, fig. 48 and fig. 49)

The standard ride height setting is the result of rigorous testing carried out in a wide variety of conditions by our technical staff.

Modifying the the ride height is a very critical operation, and can be dangerous if carried out by untrained persons.

Before changing the standard setting, measure the reference value (H, fig. 47).

The rider can adjust the rear ride height to suit his/her needs by changing the working position of the rear shock absorber. To alter the eye to eye length of the tie-rod (1), slacken the locknuts (3).

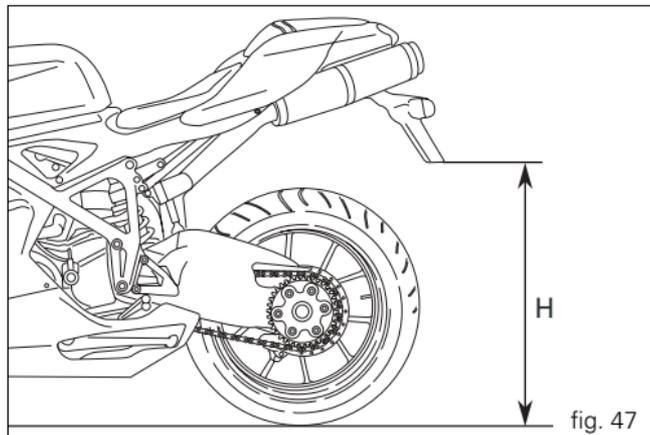


fig. 47

### Notes

Note that the lower nut (3) has a left-hand thread.

Use an open-end wrench on the flats (4) of the tie-rod (2). Once the tie-rod length is adjusted correctly, tighten the nuts (3) to 25 Nm.

### Warning

The length of the tie-rod (2) between the centres of the two eyes (1) should not exceed 285 mm.


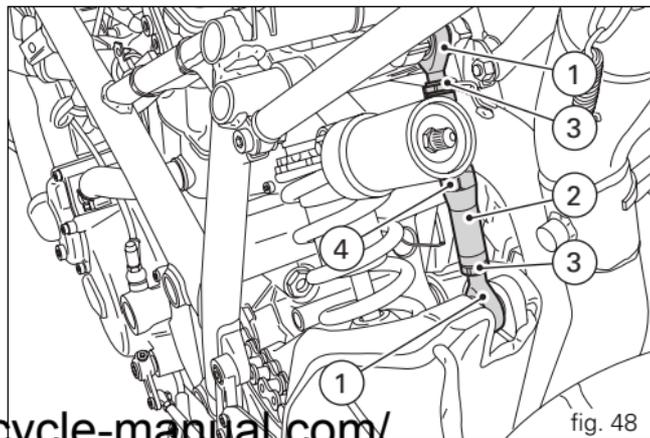


fig. 48

The maximum distance that the UNIBALL end fitting (A) can be unscrewed from the tie-rod body is 5 threads, or 7.5 mm (B).

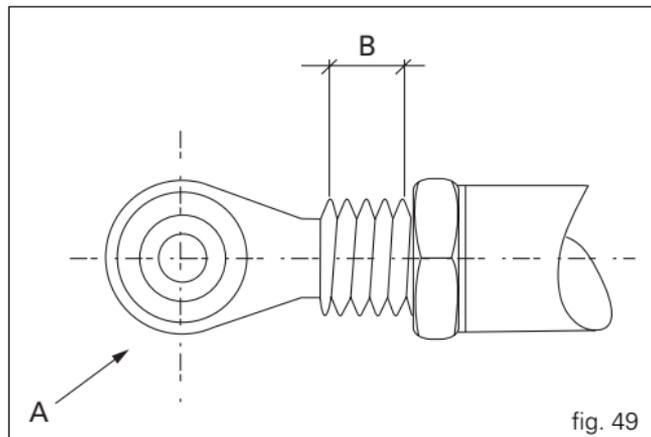

E

# Riding the motorcycle

E

## Running-in precautions

### **Max. rpm** (fig. 50)

Rpm limits to be observed during the running-in period and in normal use:

- 1) Up to 1000 km;
- 2) From 1000 to 2500 km

### **Up to 1000 km**

During the first 1000 km, keep an eye on the tachometer.

The revs should never exceed:

5.500÷6000 rpm.

During the first hours of riding, it is advisable to continuously vary the load on the engine and the rpm, though still keeping within the above limits.

For this reason, roads with numerous bends and hilly areas are ideal for running in the engine, brakes and suspension.

For the first 100 km, use the brakes gently. Do not brake violently or keep brake applied for too long. This will enable a correct break-in of friction material on brake pads against brake discs.

To allow all the mechanical moving parts in the motorcycle to adapt to one another, and to avoid shortening the life of the main engine components, it is advisable to avoid sudden acceleration and running the engine at high rpm for too long, especially uphill.

It is also advisable to check the drive chain frequently and ensure that it is lubricated as required.

<https://www.motorcycle-manual.com/>

## From 1000 to 2500 km

At this point, you can ask for more power from the engine, being careful, however, never to exceed: 7000 rpm.

### Important

Throughout the running-in period, be careful to stick to the recommended maintenance schedule and periodic service intervals indicated in the warranty booklet. Failure to follow these instructions releases Ducati Motor Holding S.p.A. from any liability whatsoever for any engine damage or shorter engine life.

Keeping to the running-in recommendations will ensure longer engine life and reduce the need for overhauls and re-tuning.

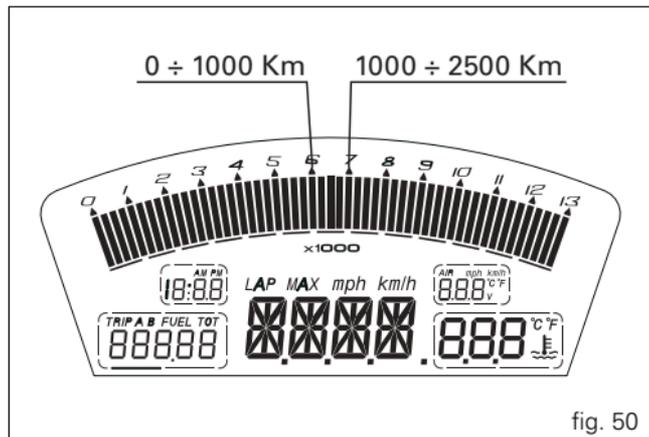


fig. 50

## Pre-ride checks



### Warning

Failure to carry out these checks before starting may result in damage to the motorcycle and injury to rider.

E

Before starting, check the following points:

#### **Fuel level in the tank**

Check the fuel level in the tank. Re-fuel if necessary (page 67).

#### **Engine oil level**

Check the oil level in the sump through the sight glass. Top up if necessary (page 90).

#### **Brake and clutch fluid**

Check the fluid levels in the respective reservoirs (page 75).

#### **Coolant**

Check coolant level in the expansion reservoir. Top up if necessary (page 74).

#### **Tyre condition**

Check the pressure and condition of the tyres (page 88).

#### **Controls**

Operate the brake, clutch, throttle and gear change controls (levers, pedals and twistgrip) to check that they function correctly.

#### **Lights and indicators**

Make sure the lights, indicators and horn work properly. Replace any burnt-out bulbs (page 82).

#### **Key locks**

Check that the fuel filler cap (page 50) and the seat are locked (page 51).

#### **Sidestand**

Make sure the sidestand operates smoothly and is in the correct position (page 52).



### Warning

If there are any faults or malfunctions, do not start the motorcycle and contact your Ducati Dealer or Authorized Service Centre.

<https://www.motorcycle-manual.com/>

## Starting the engine



### Warning

Before starting the engine, familiarise yourself with the controls that you will use when riding (page 10).



### Warning

Never start or run the engine in enclosed space. Exhaust gases are toxic and may lead to loss of consciousness or even death within a short time.

1) Turn the ignition key to **ON** (fig. 51.1 and fig. 51.2). Check that both the green light **N** and the red light  on the instrument panel come on.





### Important

The oil pressure warning light should go out a few seconds after the engine has started (page 11).



### Warning

The sidestand should be in rest position (horizontal), otherwise the safety sensor prevents the engine starting.

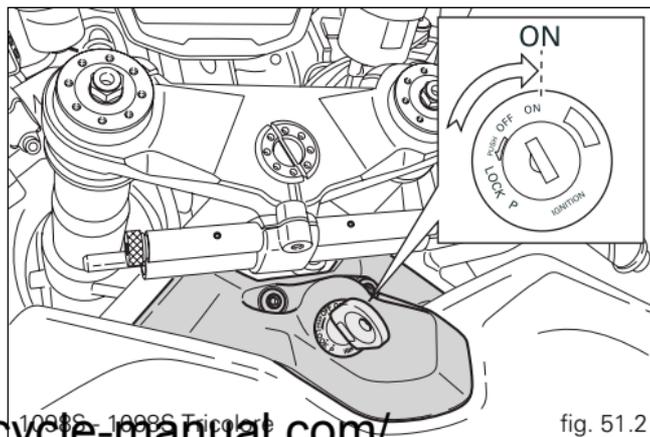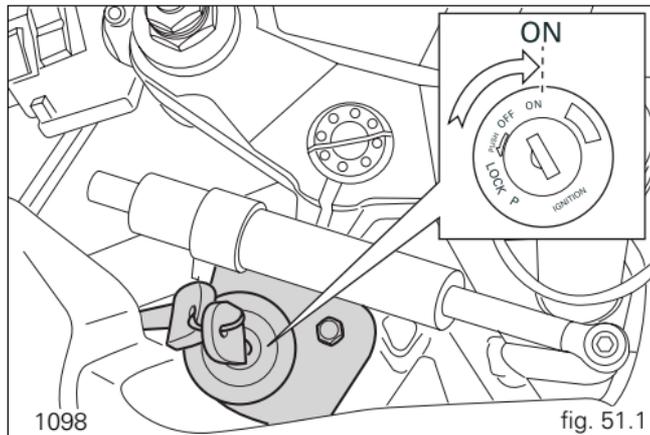

## Notes

The engine can be started with the sidestand down and the gearbox in neutral. If starting with a gear engaged, pull in the clutch lever (in this case the sidestand must be up).


2) Check that the stop switch (2, fig. 52) is positioned to  (RUN), then press the starter button (3, fig. 52).

This model has servo-assisted starting. To use the servo-assisted starting feature, press the start button (3) and release it immediately. When you press button (3) the starter motor runs automatically for a period of time that varies according to the engine temperature. The system disengages the starter motor as soon as the engine starts. If the engine fails to start, wait at least 2 seconds before pressing the start button (3) again.

Allow the engine to start on its own, without turning the throttle twistgrip.

## Important

Do not rev the engine when cold. Allow some time for the oil to warm up and reach all points that need lubricating.

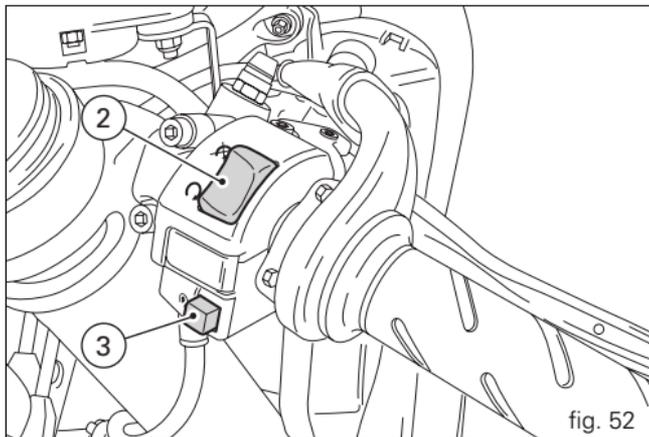

## Moving off

- 1) Disengage the clutch by squeezing the clutch lever.
- 2) Push down the gearchange lever firmly with the tip of your foot to engage first gear.
- 3) Raise the engine revs by turning the throttle twistgrip while gradually releasing the clutch lever. The motorcycle will start moving.
- 4) Release the clutch lever completely and accelerate.
- 5) To change up to the next gear, close the throttle to reduce the engine revs, disengage the clutch, lift the gearchange lever and release the clutch lever.

To change down, proceed as follows: release the twistgrip, disengage the clutch, briefly rev the engine to allow the gears to synchronize, shift down and release the clutch lever. Use the controls intelligently and opportunely: when riding uphill, do not hesitate to shift down as soon as the motorcycle starts to slow down, so you will avoid overloading the engine and putting too much strain on the the motorcycle generally.



### Important

Avoid sudden acceleration, as this may lead to misfiring and transmission snatching. The clutch lever should not be held in longer than necessary after a gear is engaged, otherwise friction parts may overheat and wear out.

## Braking

Slow down in time, change down to use the engine brake, then apply both brakes. Pull in the clutch lever before the motorcycle comes to a stop to prevent the engine stalling.



### Warning

Use both the brake lever and the brake pedal for effective braking. Using only one of the brakes will give you less braking power.

Never use the brake controls harshly or suddenly as you may lock the wheels and lose control of the motorcycle. When riding in the rain or on slippery surfaces, braking capacity is significantly reduced. Always use the brakes very gently and carefully when riding under these conditions. Any sudden manoeuvres may lead to loss of control. When riding down long, steep downhill slopes, change down to use engine braking. Apply the brakes intermittently for brief periods only. Keeping the brakes applied continuously causes the friction material to overheat and dangerously reduces braking effectiveness. Under-inflated or over-inflated tyres reduce braking efficiency and may adversely affect safe riding and road-holding on bends.

## Stopping the motorcycle

Reduce speed, change down and release the throttle twistgrip. Change down to engage first gear and then neutral. Apply the brakes and bring the motorcycle to a complete stop. Switch the engine off by turning the key to **OFF** (page 41).

## E Parking

Stop and park the motorcycle on the sidestand (see page 52).

To prevent theft, turn the handlebar fully left and turn the ignition key to the **LOCK** position.

If you park in a garage or other indoor area, make sure that there is proper ventilation and that the motorcycle is not near a source of heat.

If necessary, you can leave the sidelights on by turning the key to position **P**.

## ● Important

Do not leave the key at **P** for long periods or the battery will run down. Never leave the motorcycle unattended with the ignition key inserted.

## ⚠ Warning

The exhaust system might be hot even after engine is switched off; take special care not to touch the exhaust system with any part of your body and do not park the motorcycle next to inflammable material (wood, leaves etc.).



## Warning

Using padlocks or other locks designed to prevent movement of the motorcycle (such as brake disc locks, rear sprocket locks, and so on) is very dangerous, and may impair motorcycle operation and the safety of rider and passenger.

<https://www.motorcycle-manual.com/>

## Refuelling (fig. 53)


Do not overfill the tank when refuelling. The fuel level should always be below the rim of the filler recess.



### Warning

Use fuel with low lead content and an original octane number of 95 minimum (see table "Fluids and lubricants" on page 99).

Check that no fuel is trapped in the filler cap recess.

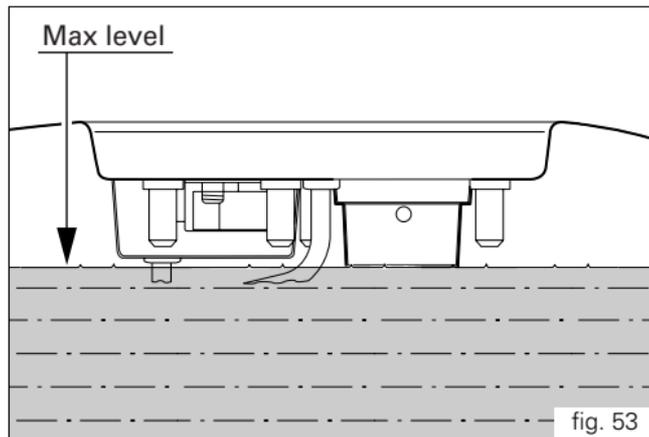

E

## Toolkit and accessories (fig. 54)

The compartment under the pillion seat contains:

use and maintenance manual;

helmet fastening cable;

toolkit consisting of:

- spark plug wrench;
- tommy bar for spark plug wrench;
- double-ended screwdriver;
- Allen key for fairing panels.



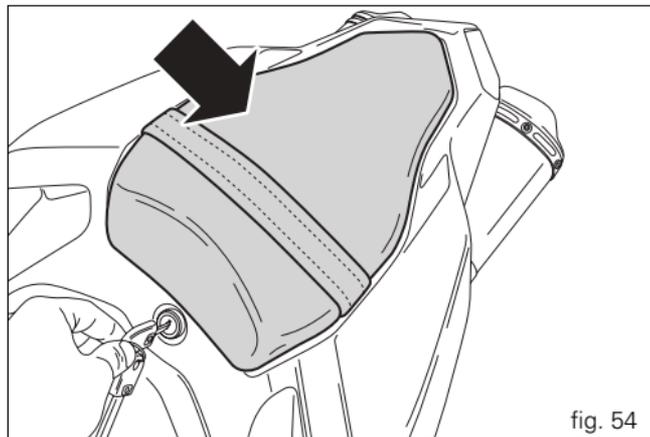


fig. 54

## USB Data Acquisition (DAQ) (for 1098S - 1098S Tricolore)

A USB DAQ (1) is supplied in kit form. To use it, position it under the seat with the cap (2) fitted and the connector (3) from the main wiring loom connected.

Refer to the "USB DAQ" procedure in the paragraph "LCD - How to set/display parameters".

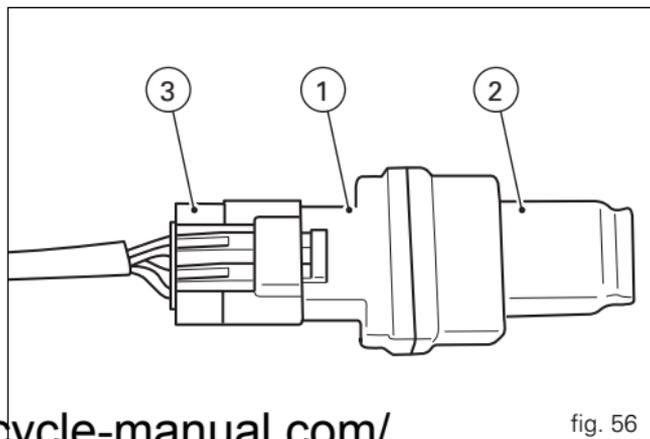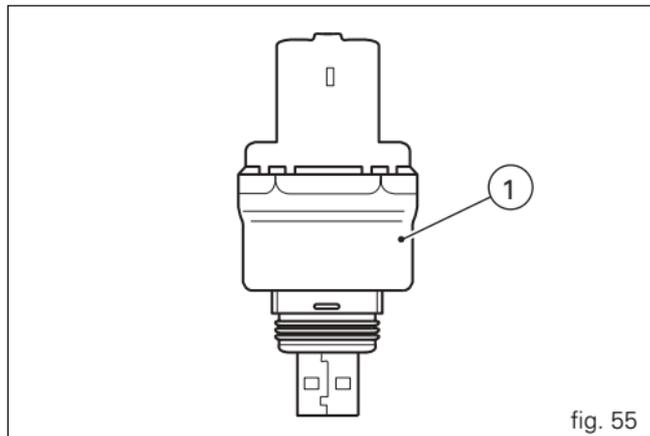

# Main maintenance operations

E

## Removing the fairing panels

Some parts of the motorcycle fairing have to be removed for certain maintenance or repair operations.



### Warning

If parts that have been removed are not refitted correctly they may become loose suddenly while riding and cause you to lose control of your motorcycle.



### Important

On refitting the headlight shell, always refit the nylon washers in correspondence with the retaining screws to avoid damaging the painted parts and the Plexiglas windshield.

## Side fairings

Remove the side fairings using the Allen key located in the underseat compartment; unscrew: the two bolts (1) securing the fairing panels to the brackets; the six bolts (2) securing the fairing panels to the headlight shell; the four bolts (3) securing the fairing panels to the frame; the two bolts (4) located under the fairing that join the right fairing panel to the left fairing panel; the two bolts (5) securing the fairing panels to the oil cooler; the two bolts (6, fig. 58) securing the front of the fairing to the headlight shell.

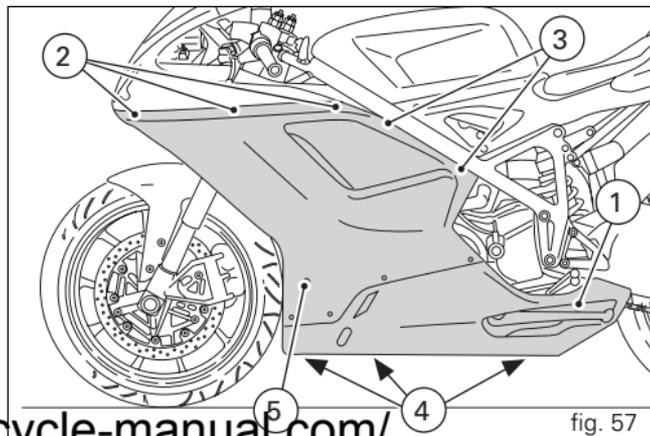


fig. 57

<https://www.motorcycle-manual.com/>



### Notes

Be careful of the splashguard, which is released by the fairing panel fastening.



### Notes

To refit the left fairing panel, lower the sidestand and pass it through the aperture provided in the panel.

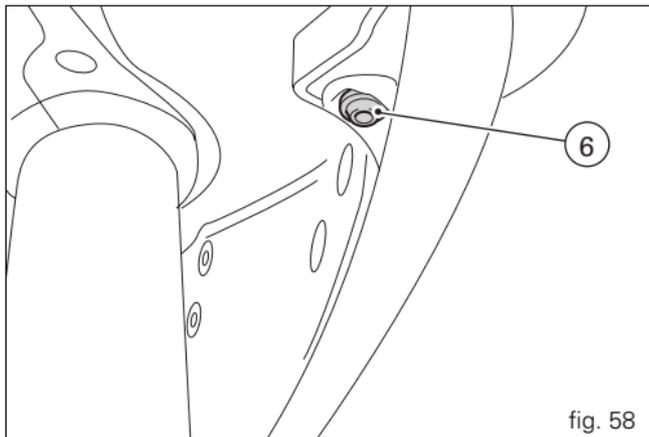


fig. 58

## Rearview mirrors



Unscrew the bolts (1) securing the rearview mirror. Release the pins (2) from the retaining clips (3) attached to the headlight shell bracket (4). Slip off the rubber covers (5) and disconnect the turn indicator wiring connectors (6). Repeat the procedure to remove the other rearview mirror.

E



### Important

On refitting, apply medium-strength threadlocker to the threads of the bolts (1).

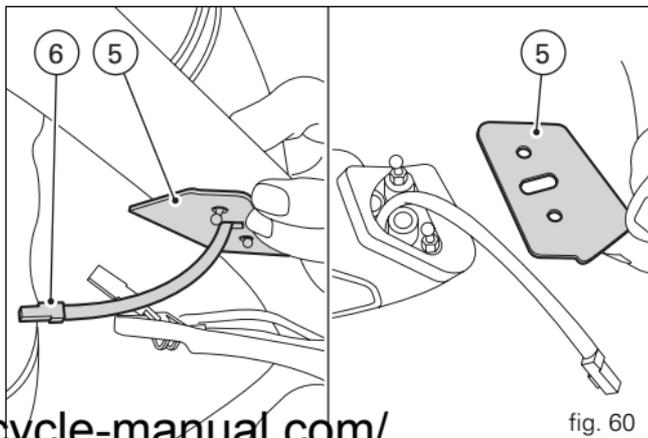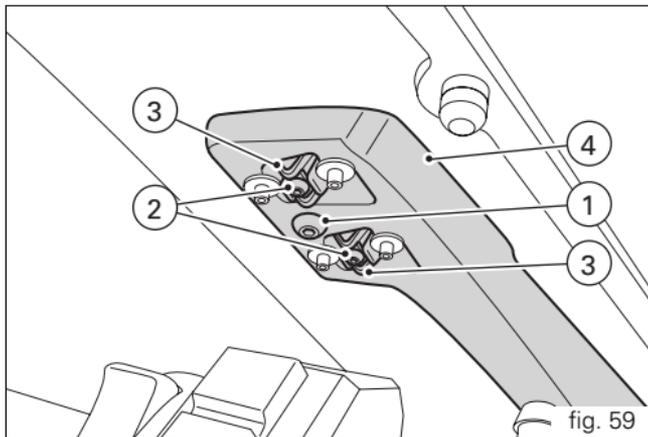

<https://www.motorcycle-manual.com/>

## Headlight shell



### Notes

To remove the headlight shell, first remove the rear-view mirrors and side fairing panels as described above.

Unscrew the two rear bolts (1) securing the headlight shell to the headlight support.



### Notes

After refitting the headlight shell, refit the side body panels and rear-view mirrors.

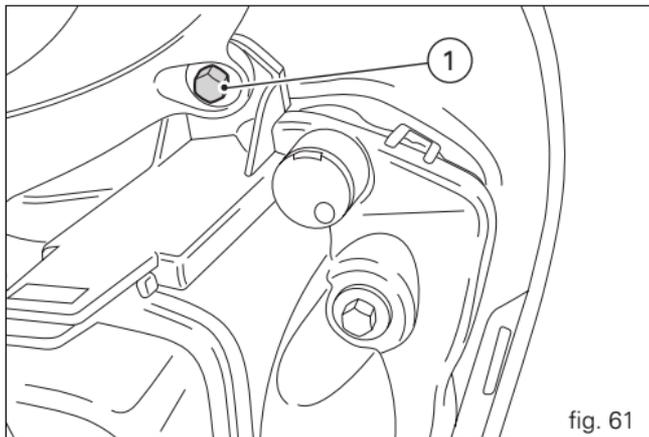


fig. 61

## Checking and topping up the coolant

(fig. 62)

Check the coolant level in the expansion reservoir on the right side of the motorcycle. It should be between the two marks (1) and (2). Mark (2) indicates **MAX** level, and mark (1) indicates **MIN** level.

Top up if below the **MIN** level.

**E** Remove the right-hand fairing (page 70).

Unscrew the filler cap (3, fig. 62) and add a mixture consisting of water and antifreeze SHELL Advance Coolant or Glycoshell (35-40% of the volume) up to the **MAX** mark.

Refit the cap (3) and replace all removed parts.

This type of mixture gives the best operating conditions (the coolant starts to freeze at  $-20^{\circ}\text{C}/-4^{\circ}\text{F}$ ).

Cooling circuit capacity:  $2,8\text{ dm}^3$  (litres).

### Warning

This operation must be carried out with the engine cold and with the motorcycle vertical and level.

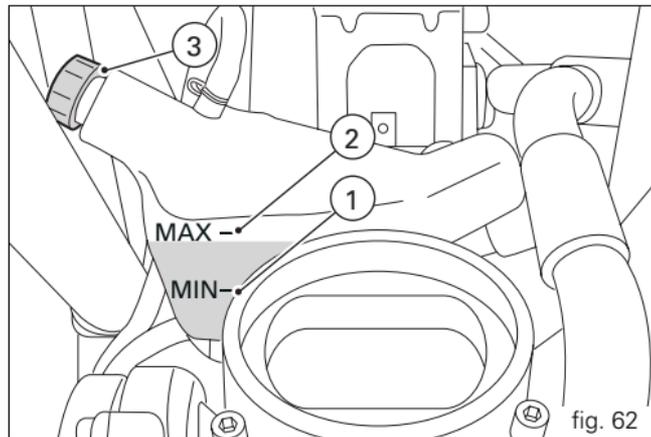


fig. 62

## Checking the brake and clutch fluid level

The level must not fall below the **MIN** mark on the corresponding reservoir (fig. 63) (the figure shows the front and rear brake fluid reservoirs).

If the level is too low, air can get into the circuit, thus impairing the efficiency of the system.

Brake and clutch fluid must be topped up and changed at the intervals specified in the routine maintenance table (see Warranty Booklet) by a Ducati Dealer or Authorized Service Centre.



### Important

It is recommended that all brake and clutch hoses be renewed every 4 years.

### Brake system


If there is excessive play at the brake lever or pedal even though the brake pads are still in good condition, contact a Ducati Dealer or Authorized Service Centre to have the system inspected and any air bled from the circuit.



### Warning

Brake and clutch fluid can damage paintwork and plastic parts, so avoid contact with them. Hydraulic fluid is corrosive and can cause damage and injuries. Never mix fluids of different qualities.

Check that the seals are in good condition.

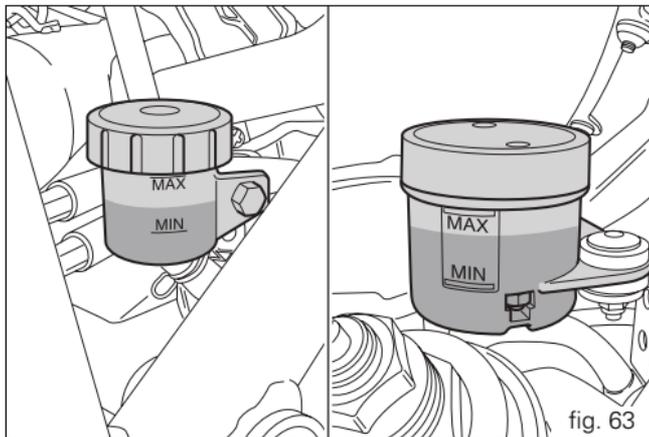

### Clutch system


If there is too much play at the clutch lever and the motorcycle jumps or stops when a gear is engaged, this indicates air in the system. Contact a Ducati Dealer or Authorized Service Centre to have the system inspected and the air bled from the system.

E



### Warning

The clutch fluid level in the reservoir tends to rise as the friction material on the clutch plates wears out. Do not exceed the specified level (3 mm above the minimum level).

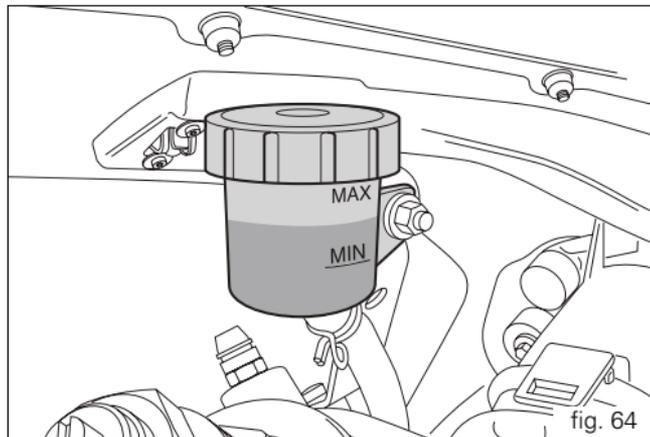



## Checking the brake pads for wear

(fig. 65 and fig. 66)

The brake pads are marked with wear indicators so that they can be checked without removing them from the calipers. If the grooves in the pad friction material are still visible, the pad is still in good condition.

### Important

Have the brake pads replaced by a Ducati Dealer or Authorized Service Centre.

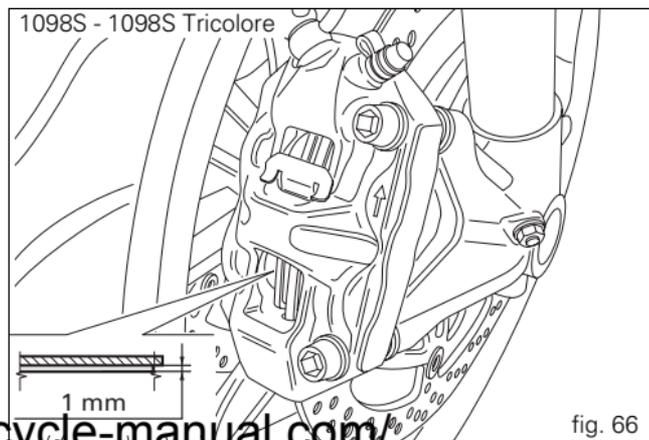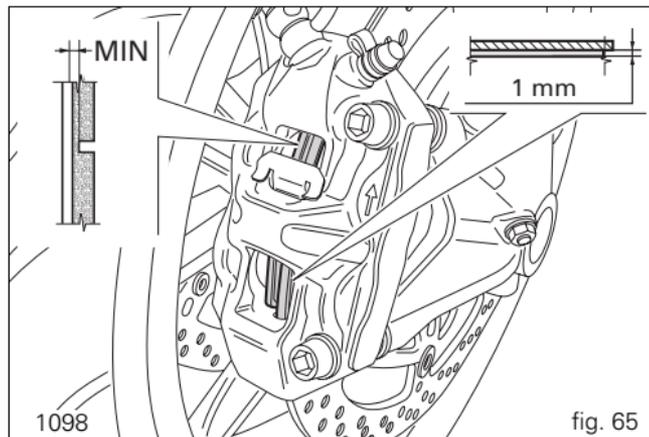

## Lubricating cables and joints

The condition of the outer throttle and choke cables should be checked at regular intervals. The outer cables should show no signs of kinking or cracking. Operate the controls to make sure the inner cables slide smoothly inside the outer cables: if you feel any friction or catching, have the cable replaced by a Ducati Dealer or Authorized Service Centre.

To prevent problems, periodically open the twistgrip housing by unscrewing the two bolts (1, fig. 67) and lubricate the ends of each control cable and the races with SHELL Advance Grease or Retinax LX2.




### Warning

Close the twistgrip housing carefully, inserting the cable in the race.

Refit the housing and tighten the bolts (1) to 10 Nm.

To ensure smooth operation of the sidestand pivot, remove dirt and apply SHELL Alvania R3 grease to all friction points.


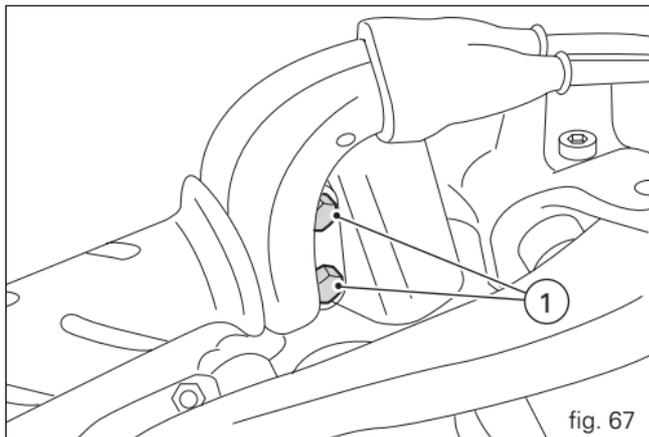


## Adjustment of the throttle cable free play

In all handlebar positions, the throttle twistgrip should have free play of 1.5 - 2.0 mm measured at the edge of the twistgrip. If necessary, adjust using the adjusters (1 and 2, fig. 69) located on the steering tube on the right-hand side of the motorcycle.

Adjuster (1) is for throttle opening, and adjuster (2) is for throttle closing.

Peel back the sleeves to access the adjusters and slacken the locknuts. Adjust both adjusters by the same amount: turn clockwise to increase free play, anti-clockwise to decrease free play. When finished, tighten the locknuts and replace the sleeves.

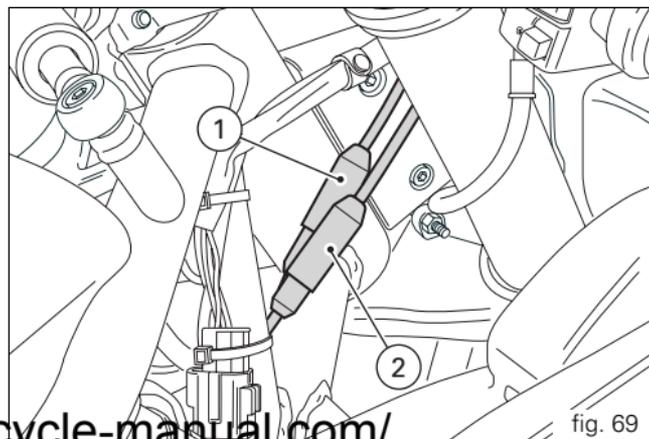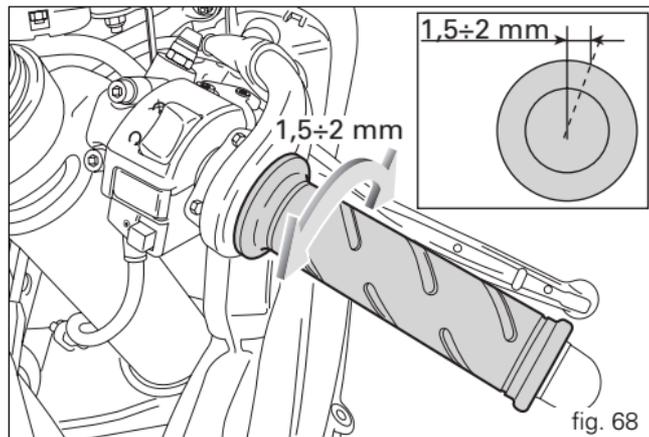

## Charging the battery (fig. 70)

Before charging the battery, it is best to remove it from the motorcycle.

Remove the left-hand side fairing (page 70), unscrew the bolt (1) and remove the mounting bracket (2). Always disconnect the black negative terminal (-) first, then the red positive terminal (+).



### Warning

The battery produces explosive gases: keep it away from heat sources and flames.

Charge the battery in a well-ventilated area.

Connect the battery charger leads to the battery terminals: red to the positive terminal (+), black to the negative terminal (-).



### Important

Connect the battery to the charger before switching on: failure to do so can result in sparking at the battery terminals, which could ignite the gases inside the cells. Always connect the red positive terminal (+) first.


Replace the battery in its support (3), then connect the terminals. Apply some grease to the bolts to improve conductivity and fasten the bracket (2) with the bolt (1).



## Warning

Keep the battery out of the reach of children.

Charge the battery at 0.9 A for 5 to 10 hours.

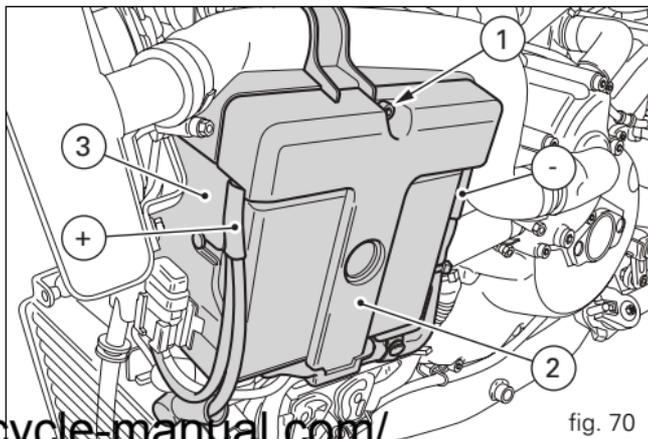

## Checking the chain tension (fig. 71)



### Important

Have the chain tensioned at a Ducati Dealer or Authorized Workshop.

With the motorcycle on the sidestand, push down the chain with a finger. Then release the chain and measure the distance between the surface of the chain slider and the centre of the pin below it. The distance should be within 33 to 35 mm.



### Warning

The tensioner lock nuts (1) must be tightened correctly to ensure rider safety.



### Important

An incorrectly tensioned chain will cause the rapid wear of transmission parts.

## Lubricating the drive chain

The chain fitted on your motorcycle has O-rings to protect its moving parts from dirt, and to hold the lubricant inside.


So as not to damage these seals when cleaning the chain, use special solvents and avoid aggressive washing with high-pressure steam cleaners.

After cleaning, blow the chain dry with compressed air or wipe with an absorbent material, then lubricate each link with SHELL Advance Chain or Advance Teflon Chain.



### Important

Using non-specific lubricants may cause severe damage to the chain and the front and rear sprockets.

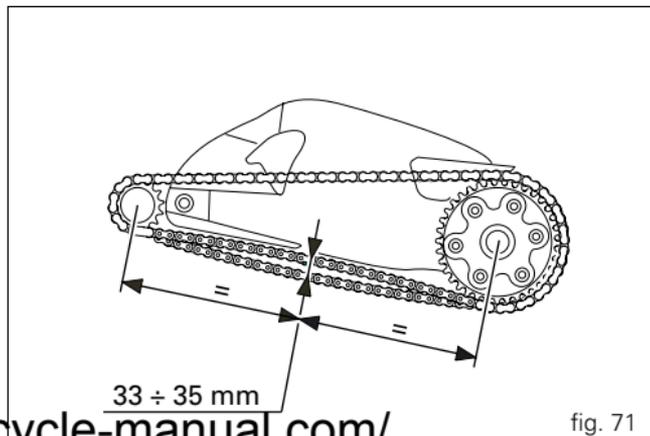

## Changing the high and low beam bulbs

Before replacing a burnt-out bulb, make sure that the new one matches the voltage and wattage specifications in the "Electrical System" paragraph on page 105. Always check that the new bulb works before refitting removed parts.

fig. 72 shows the position of the low beam (LO), high beam (HI) and side light (1) bulbs.

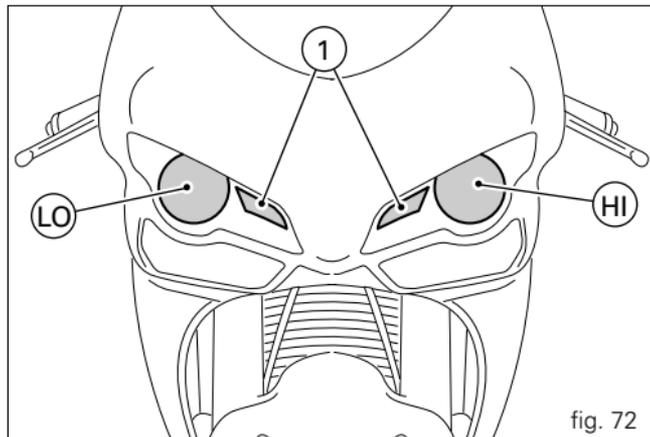


fig. 72

### **E** Headlight

To gain access to the left-hand bulb, remove the cover (2) by pressing the lever (A).

Rotate the locking ring nut (3) of the upper bulb body anti-clockwise and extract the burnt-out bulb. Replace with a bulb of equal rating.

On refitting, rotate the locking ring nut (3) clockwise to secure the bulb in place.

The right-hand bulb is replaced in the same way.

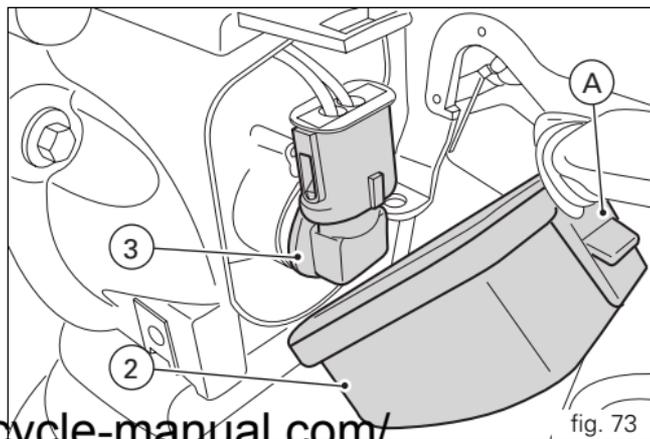


fig. 73



## Notes

It is not necessary to disconnect the main wiring loom cable in order to replace the headlight bulbs.



## Notes

Be careful to hold the new bulb at the base only. Never touch the transparent body with your fingers or it will blacken resulting in reduced bulb brilliancy.

### **Refitting**


After changing the burnt-out bulb, replace the cover and close it by pressing it against the lever.

## Changing the sidelight bulb

To access the sidelights (1), reach your hand inside the headlight support and take the bulb-holders out of their seats. Turn the bulb retaining ring (1) anti-clockwise and remove the burnt-out bulb.

Renew the burnt-out bulb.

On refitting, turn the bulbs (1) clockwise to secure.

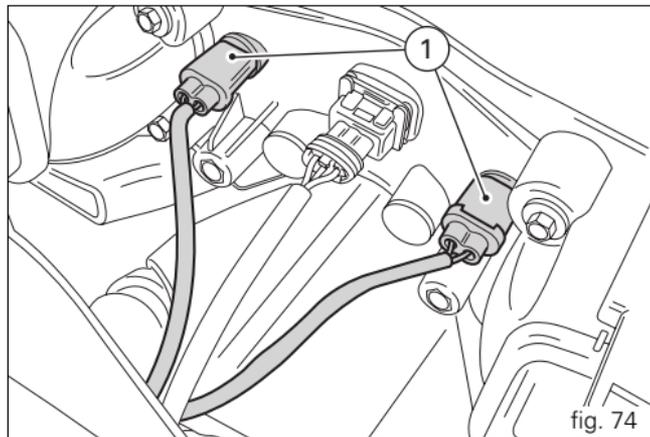


E

## Rear turn indicators (fig. 75)


To change the rear turn indicator bulbs, rotate the indicator body (1) by a quarter of a turn so that the lens is facing upwards, and withdraw it from indicator support.

The bulb has a bayonet-type end fitting: to remove it, push it in and turn it counter-clockwise. Push in the new bulb and turn it clockwise until it clicks into place. Refit the indicator body (3) to its support and rotate it by a quarter of a turn.

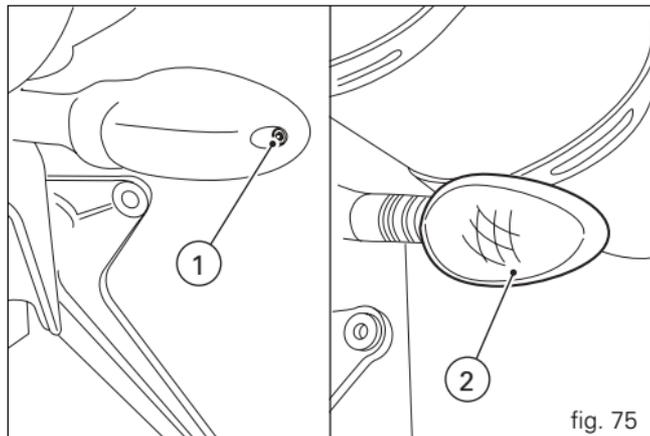

## Number plate light (fig. 76)

To access the number plate light bulb, unscrew the bolt (3) securing the cover (4). Remove the bulb and replace it.

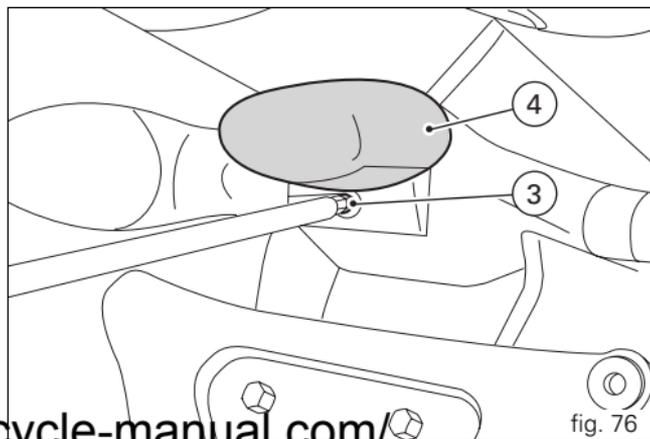

## Headlight aim (fig. 77)

To check the headlight aim, place the motorcycle upright with the tyres inflated to the correct pressure and one person sitting astride the motorcycle. The motorcycle should be perfectly vertical, with its longitudinal axis at right angles to a wall or screen at a distance of 10 metres.

Draw a horizontal line on the wall at the height of the centre of the headlight and a vertical one in line with the longitudinal axis of the motorcycle.

If possible, perform this check in conditions of low ambient light.

Switch on the low beam headlight.

The height of the upper limit between the dark area and the lit area must not be more than nine tenths of the height of the centre of the headlamp from the ground.

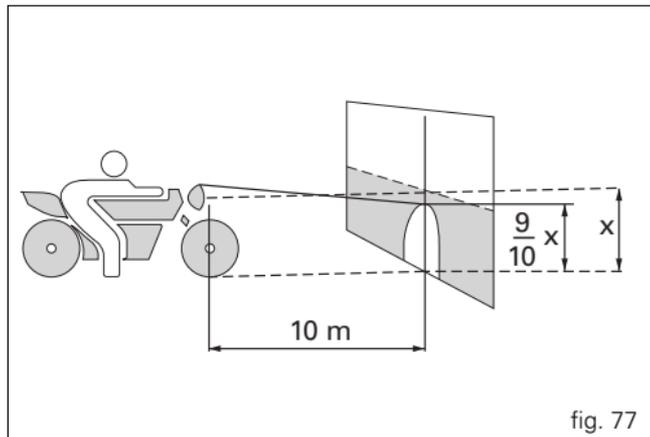


fig. 77



## Notes

This is the procedure specified by Italian regulations for checking the maximum height of the light beam.

Owners in other countries should adapt this procedure to the regulations in force in the country where the motorcycle is used.

The horizontal position of the left-hand headlight can be adjusted by means of the adjuster screw (1, fig. 78) located behind the headlight. Turn the screw clockwise and the beam will shift to the right; turning the screw anti-clockwise will shift the beam to the left.

The vertical position of the left-hand headlight can be adjusted by means of the adjuster screw (2, fig. 78) located behind the headlight. Turn the screw clockwise to lower the beam or anti-clockwise to raise it.

Repeat the above procedure to adjust the right-hand headlamp.

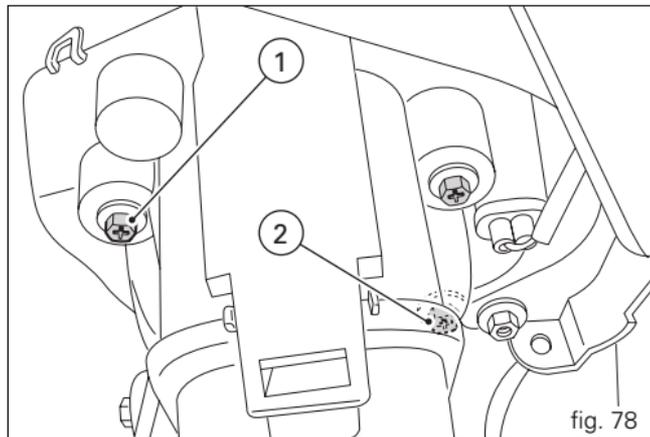


fig. 78

### Rearview mirror adjustment (fig. 79)

The rearview mirror is adjusted manually by applying pressure at point (A).

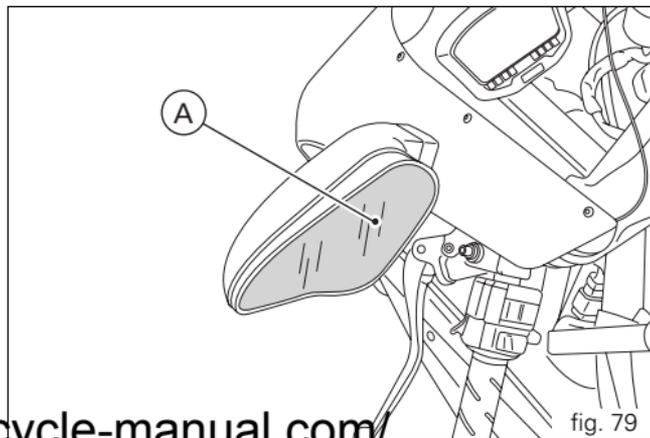


fig. 79

## Tubeless tyres

Front tyre pressure:

2,1 bar -2.3 kg/cm<sup>2</sup>

Rear tyre pressure:

2,2 bar -2.4 kg/cm<sup>2</sup>

As tyre pressures are affected by changes in temperature and altitude, check and adjust them whenever you are riding in areas where there are large variations in temperature or altitude.



### Important

Check and adjust the pressures with the tyres cold. To prevent distortion of the front wheel rim, increase tyre pressure by 0.2 to 0.3 bar when riding on bumpy roads.

## Tyre repair or replacement (Tubeless)

With minor punctures, tubeless tyres take a long time to deflate, as they tend to hold the air inside. If you find that one of the tyres is slightly deflated, check the tyre for slow punctures.



### Warning

Punctured tyres must be renewed.

Replace with tyres of the original brand and type.

Be sure to tighten the valve dust caps securely to prevent leaks while riding. Never fit tyres with inner tubes, as these can cause the tyre to burst suddenly, with possibly serious consequences for the rider and passenger.

After changing the tyre, the wheel must be balanced.



### Important

Do not remove or alter the position of the wheel balancing weights.



### Notes

If tyres need changing, contact a Ducati Dealer or Authorized Service Centre to make sure wheels are removed and refitted correctly.

<https://www.motorcycle-manual.com/>

### Minimum tread depth

Measure the tread depth (S, fig. 80) at the point where the tread is most worn.


It should not be less than 2 mm, and in any case not less than the legal limit.



### Important

Visually inspect the tyres at regular intervals for cracks and cuts, especially on the side walls, and bulges or large stains that indicate internal damage. Replace them if badly damaged.

Remove any stones or other foreign bodies stuck in the tread.

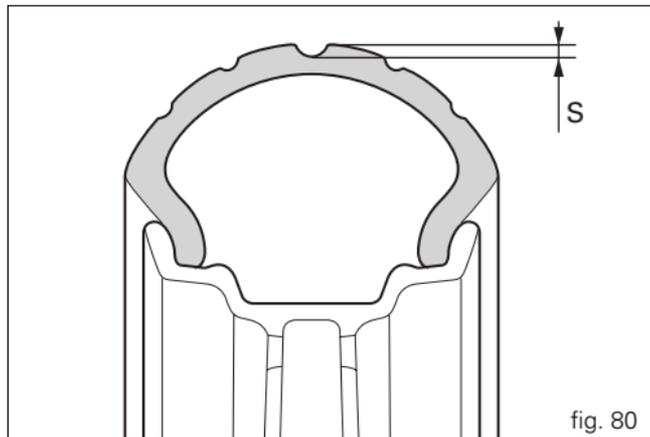

## Checking the engine oil level (fig. 81)

Check the engine oil level through the sight glass (1) on the clutch-side crankcase cover. When checking oil level, the motorcycle should be perfectly upright and the engine cold. The oil level should be between the two marks next to the sight glass. Top up the oil level with SHELL Advance Ultra 4, if low. Undo the filler cap (2) and top up to correct level. Replace the filler cap.

E



### Important

To change the engine oil and filters at the intervals specified in the maintenance table in the Warranty Booklet, contact a Ducati dealer or Authorized Service Centre.

### Oil viscosity

SAE 10W-40

The other viscosity values shown in the table can be used if the local average temperature is within the limits specified for that oil viscosity.

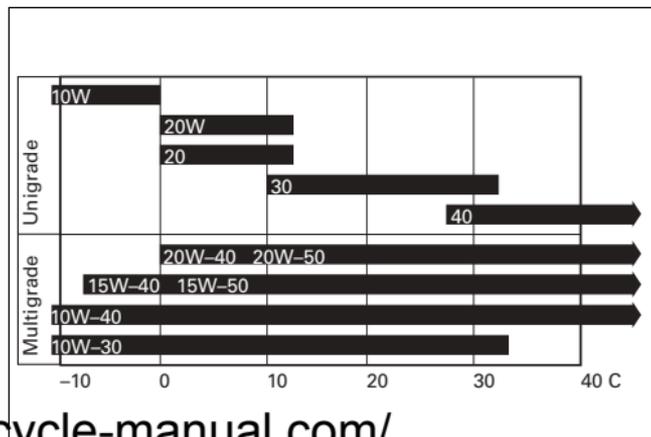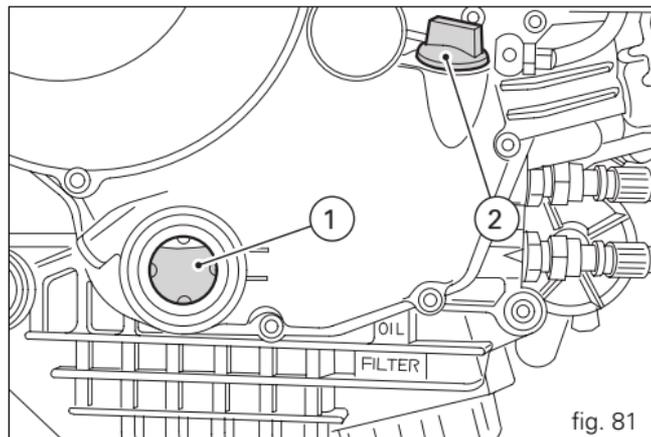

<https://www.motorcycle-manual.com/>

## Cleaning and renewing the spark plugs

(fig. 82)

Spark plugs are an important part of the engine and should be checked at regular intervals.

The condition of the spark plugs provides a good indication of how well the engine is running.

Have the spark plugs inspected or renewed at a Ducati Dealer or Authorized Workshop. Firstly, they will check the colour of the ceramic insulator of the central electrode: an even brown colour is a sign that the engine is in good running order.



### Notes

Secondly, they will check the central electrode for wear and measure electrode gap. Electrode gap should be:  $0,6 \div 0,7$  mm.



### Important

A gap outside the specified limits will adversely affect engine performance and may lead to difficult starting or erratic idling.

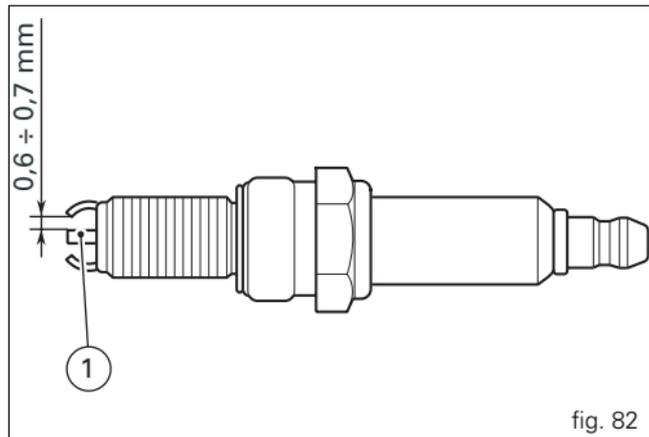


fig. 82

## General cleaning

To preserve the original shine on metal surfaces and paintwork, wash and clean your motorcycle at regular intervals depending on the type of use and according to the particular road conditions. Use specific products, where possible biodegradable. Avoid aggressive detergents or solvents.

E

### Important

Do not wash your motorcycle immediately after use, as marks can form due to evaporation of the water on hot surfaces. Never clean the motorcycle using hot or high-pressure water jets. Cleaning the motorcycle with a high-pressure water jet may lead to seizure or serious faults in the front fork, wheel hub assembly, electrical system, front fork seals, air inlets or exhaust silencers, with consequent loss of safety.

If parts of the engine are unusually dirty or greasy, use a degreasing agent, avoiding contact with transmission components (chain, front and rear sprockets, etc.). Rinse with warm water and dry all surfaces with chamois leather.



## Warning

There may be loss of braking efficiency immediately after washing the motorcycle. Never grease or lubricate the brake discs. This will cause loss of braking efficiency. Clean the discs with an oil-free solvent.

<https://www.motorcycle-manual.com/>

## Storing the motorcycle

If the motorcycle is to be left unused for a long period, it is advisable to carry out the following operations first:

clean the motorcycle;

drain the fuel from fuel tank;

pour a few drops of engine oil into the cylinders through the spark plug bores, then turn the engine over by hand a few times to form a protective film of oil on the inner walls of the cylinder;

place the motorcycle on the paddock stand;

disconnect and remove the battery.

If the motorcycle has been left unused for more than a month, the battery should be checked and re-charged if necessary.

Protect the motorcycle with a specific motorcycle cover that will not damage the paintwork or retain moisture.

This type of motorcycle cover is available from Ducati Performance.

## Important notes

The legislation in some countries (France, Germany, Great Britain, Switzerland etc.) sets certain noise and pollution standards.

Periodically carry out the required checks and renew parts as necessary, using Ducati original spare parts, in compliance with the regulations in the country concerned.

# Maintenance

E

Programmed maintenance plan: operations to be carried out by the dealer

List of operations with frequency (distance or time interval *)	km x1000	1	12	24	36	48	60
	miles x1000	0,6	7,5	15	22,5	30	37,5
	Months	6	12	24	36	48	60
Change the engine oil		•	•	•	•	•	•
Change the engine oil filter		•	•	•	•	•	•
Clean the engine oil pick-up filter					•		
Check the engine oil pressure				•		•	
Check/adjust the valve clearances (1)			•	•	•	•	•
Check the tension of the timing belts (1)			•		•		•
Renew the timing belts				•		•	
Check and clean the spark plugs. Renew if necessary				•		•	
Check and clean the air filter (1)			•		•		•
Change the air filter				•		•	

<https://www.motorcycle-manual.com/>

List of operations with frequency (distance or time interval *)	km x1000	1	12	24	36	48	60
	miles x1000	0,6	7,5	15	22,5	30	37,5
	Months	6	12	24	36	48	60
Check throttle body synchronisation and idle speed setting (1)		•	•	•	•	•	•
Check the brake and clutch fluid levels	•	•	•	•	•	•	•
Change the clutch and brake fluid				•			
Check and adjust the brake and clutch control cables		•	•	•	•	•	•
Check/lubricate the throttle/choke cables		•	•	•	•	•	•
Check tyre pressure and wear	•	•	•	•	•	•	•
Check the brake pads. Renew if necessary	•	•	•	•	•	•	•
Check the steering head bearings			•		•		
Check the drive chain tension, alignment and lubrication	•	•	•	•	•	•	•
Check the clutch disc pack. Renew if necessary (1)		•	•	•	•	•	•
Checking the coolant level		•	•	•	•	•	•
Change the coolant				•			
Check operation of electric fans and sealing of coolant circuit		•	•	•	•	•	•
Check the rear wheel cush drive			•		•		
Check the wheel hub bearings			•		•		
Check the indicators and lighting		•	•	•	•	•	•
Check tightness of nuts and bolts securing the engine to the frame		•	•	•	•	•	•
Check the sidestand		•	•	•	•	•	•
Check tightness of the front wheel axle nut		•	•	•	•	•	•

<https://www.motorcycle-manual.com/>

List of operations with frequency (distance or time interval *)	km x1000	1	12	24	36	48	60
	miles x1000	0,6	7,5	15	22,5	30	37,5
	Months	6	12	24	36	48	60
Check tightness of the rear wheel axle nut			●	●	●	●	●
Check the external fuel hoses			●	●	●	●	●
Change the front fork oil					●		
Check the forks and rear shock absorber for oil leaks			●	●	●	●	●
Check the front sprocket retaining bolts			●	●	●	●	●
General lubrication and greasing			●	●	●	●	●
Check and recharge the battery			●	●	●	●	●
Road test the motorcycle		●	●	●	●	●	●
General cleaning			●	●	●	●	●

\* **Service operation to be carried out in accordance with the specified distance or time intervals (km, miles or months), whichever occurs first.**

**(1) Operation to be carried out only at the specified distance intervals.**

<https://www.motorcycle-manual.com/>

Programmed maintenance plan: operations to be carried out by the dealer

List of operations with type of intervention (distance or time interval *)	km x1000	1
	miles x1000	0,6
	Months	6
Checking the engine oil level		●
Check the brake and clutch fluid levels		●
Check tyre pressure and wear		●
Check the drive chain tension and lubrication		●
Check the brake pads. If necessary, contact your dealer to renew pads		●

**\* Service operation to be carried out in accordance with the specified distance or time intervals (km, miles or months), whichever occurs first.**

<https://www.motorcycle-manual.com/>

# Technical data

## Dimensions (mm) (fig. 83)

### Weights

In running order without fuel:

188 kg (1098);

186 kg (1098S - 1098S Tricolore).

In running order without liquids and battery:

173 kg (1098);

171 kg (1098S - 1098S Tricolore);

Fully laden:

390 kg.



### Warning

Failure to observe weight limits could result in poor handling and impair the performance of your motorcycle, and could result in loss of control.

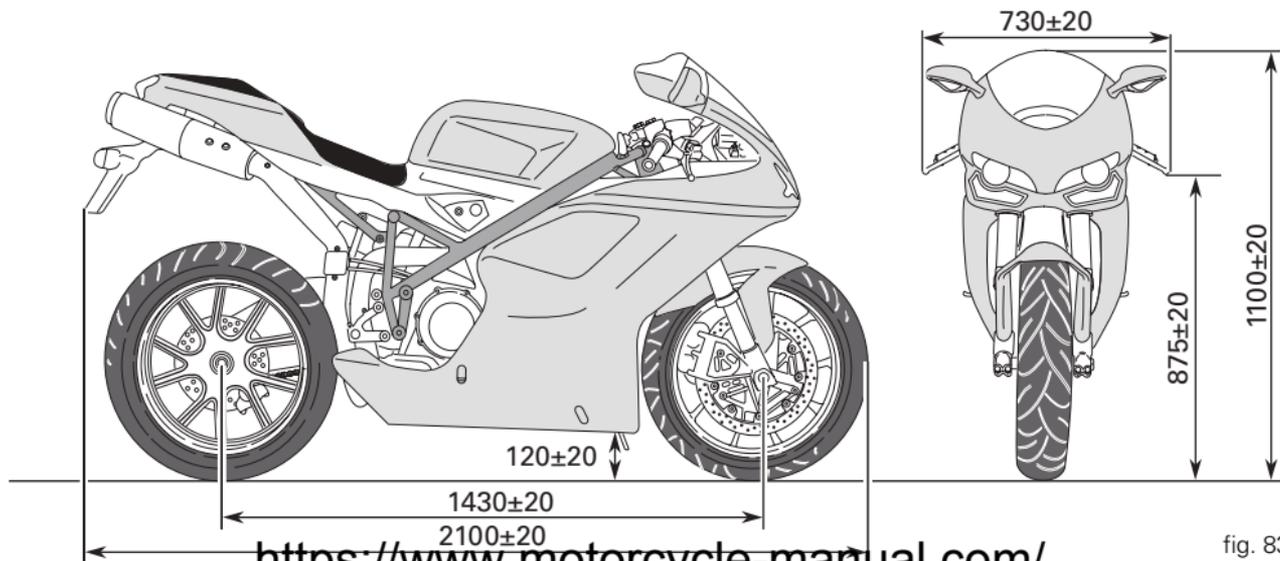


fig. 83

<https://www.motorcycle-manual.com/>

<b>Fluids and lubricants</b>	<b>Type</b>	
Fuel tank, including a reserve of 4 dm <sup>3</sup> (litres)	Unleaded fuel with 95 fuel octane rating (at least)	15,5 dm <sup>3</sup> (litres)
Lubrication circuit	SHELL - Advance Ultra 4	3,7 dm <sup>3</sup> (litres)
Front/rear brake and clutch circuits	Special hydraulic system fluid SHELL Advance Brake Dot 4	—
Protection for electrical contacts	SHELL - Advance Contact Cleaner spray for electric systems	—
Front fork for 1098 only	SHELL - Advance Fork 7.5 or Donax TA	439 cc (per leg)
Front forks for 1098S - 1098S Tricolore only	SHELL - Advance Fork 7.5 or Donax TA	155 mm (each leg) oil level
Cooling system	SHELL - Advance Coolant antifreeze or Glycoshell 35-40% + water	2,3 dm <sup>3</sup> (litres)



### Important

Do not use additives in fuel or lubricants.

<https://www.motorcycle-manual.com/>

## Engine

Longitudinal 90° "L" twin cylinder, four-stroke.

Bore (mm):

104.

Stroke (mm):

64,7.

Total displacement cm<sup>3</sup>:

1099.

Compression ratio:

12,5±0,5:1.

Max power at crankshaft (95/1/EC), kW/HP:

113 kW 136 CV @ 9,750 rpm

Max torque at crankshaft (95/1/EC):

116 Nm @ 8,000 rpm

Maximum rotation speed, rpm:

10.700.



### Important

Do not exceed the specified rpm limits in any running conditions.

## Timing system


**Desmodromic** (type) with four valves per cylinder, operated by eight rocker arms (4 opening rockers and 4 closing rockers) and two overhead camshafts. Driven by the crankshaft through spur gears, timing belt pulleys and toothed timing belts.

## Desmodromic timing system (fig. 84)

- 1) Opening (or upper) rocker arm.
- 2) Opening (upper) shim.
- 3) Closing (lower) shim.
- 4) Return spring for lower rocker arm.
- 5) Closing (lower) rocker arm.
- 6) Camshaft
- 7) Valve.

## Performance data

Maximum speed in any gear should be reached only after the correct running-in period with the motorcycle properly serviced at the recommended intervals.

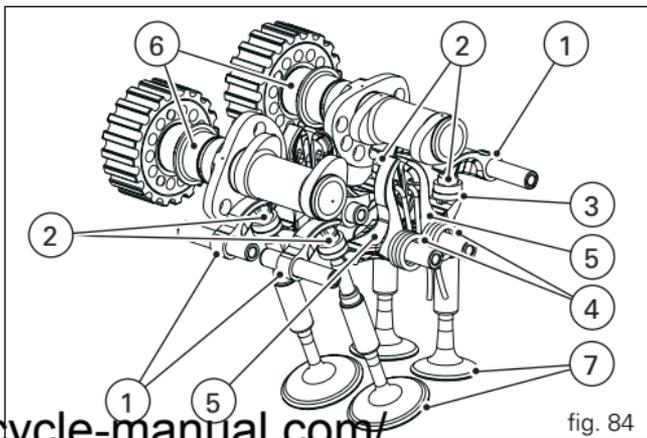

## Spark plugs

Make:

NGK

Type:

MAR10A-J

## Fuel system

MARELLI indirect electronic injection.

Throttle body diameter:

60 mm.

Injectors per cylinder: 1.

Holes per injector: 12.

Fuel supply: 95-98 RON.

## Brakes

### Front

Semi-floating drilled dual disc

Braking surface material:

steel.

Flange material:

aluminium.

Disc diameter:

330 mm.

Hydraulically operated by a control lever on right handlebar.

Make of brake calipers:

BREMBO.

Type:

34-4 pistons.

M4-34

Friction material:

TT 2910.

Master cylinder type:

PR18/19.

### Rear

Fixed drilled steel disc.

Disc diameter:

245 mm.

Hydraulically operated by pedal on right side.

Make:

BREMBO

Type:

P34c pistons

Friction material:

FERIT I/D 450 FF

Master cylinder type:

PS 11 b.



## Warning

The brake fluid used in the brake system is corrosive. In the event of accidental contact with eyes or skin, wash the affected area with copious amounts of running water.

## Transmission

Dry clutch operated by a control lever on left handlebar. Transmission from engine to gearbox input shaft via spur gears.

Front sprocket/clutch sprocket ratio:

32/59

6-speed gearbox with constant mesh gears, gearchange pedal on left side of motorcycle.

Final drive ratio:

15/38

Total gear ratios:

1<sup>st</sup> 15/37

2<sup>nd</sup> 17/30

3<sup>rd</sup> 20/28

4<sup>th</sup> 22/26

5<sup>th</sup> 23/24

6<sup>th</sup> 24/23

Drive transmitted from gearbox to rear wheel via chain:

Make:

DID

Type:

525 HV 2

Dimensions:

5/8"x5/16".

No. of links:

97+1 joining link.



## Important

The above gear ratios are approved and should not be modified under any circumstances.

However, if you wish to tune up your motorcycle for competitions or special tracks, Ducati Motor Holding S.p.A. will be pleased to provide information about the special ratios available. Please contact a Ducati Dealer or Authorized Service Centre.



## Warning

For replacement of the rear sprocket, contact a Ducati Dealer or Authorized Workshop. Incorrect replacement of this component could seriously compromise your safety and cause irreparable damage to the motorcycle.

<https://www.motorcycle-manual.com/>

## Frame

ALS450 steel tube trellis frame.  
Steering angle (on each side):  
28° 30'.

## Wheels

Five-Y-spoke, light-alloy rims.

### **Front**

Dimensions:  
MT 3.50x17".

### **Rear**

Dimensions:  
MT 6.00x17".

Both wheels have removable axles.

## Tyres

### **Front**

Radial tubeless tyre  
Size:  
120/70-ZR17

### **Rear**

Radial tubeless tyre  
Size:  
190/55-ZR17

## Suspension

### Front

Hydraulic upside-down fork equipped with external adjusters for adjustment of rebound and compression damping and preload (for inner springs of fork legs).

Stanchion diameter:

43 mm with TIO treatment (1098);

43 mm with TIN treatment (1098S - 1098S Tricolore).

Travel along leg axis:

127 mm;

120 mm.

### Rear

Progressive linkage with a rocker arm connecting the frame and upper pivot point of the shock absorber.

The shock absorber is adjustable for rebound, compression, and spring preload. At the bottom pivot point it is connected to a light-alloy swingarm. The swingarm hinges on a pivot shaft that passes through the frame and engine.

This system gives the motorcycle excellent stability.

Shock absorber travel:

59,5 mm.

Wheel travel:

127 mm.

## Exhaust system

Equipped with catalytic converter in compliance with Euro 3 emission regulations.

USA model: not catalyzed.

## Available colours

### 1098

Ducati anniversary red, code F\_473.101 (PPG);

Transparent, code 228.880 (PPG);

red frame with black wheels.

Ducati yellow, code F\_473.201 (PPG);

Transparent, code 228.880 (PPG);

Grey frame with black wheels.

### 1098S

Ducati anniversary red, code F\_473.101 (PPG);

Transparent, code 228.880 (PPG);

red frame with black wheels (red stripe above wheels).

Midnight black, code 928 D413 (PAL);

Transparent, code 228.880 (PPG);

red frame with black wheels (red stripe above wheels).

<https://www.motorcycle-manual.com/>

## Electrical system

The main components of the electrical system are:

headlight:

bulb type: 2 x **H11 (12 V-55 W)**.

side light:

bulb type: 2 x **H16W (12 V-6 W)**.

Electrical controls on handlebars:

turn indicators:

Front: **LED**.

Rear: **bulb type: R10W (12 V-10 W)-orange**.

Horn.

Stop light switches.

Battery, 12 V-10 Ah.

**Alternator 12 V-480 W.**

**Electronic voltage regulator** (rectifier), protected by a **30 A** fuse near the battery.

Starter motor, 12 V-0.7 kW

Tail light and brake light:

LED.

Number plate light:

bulb type: **W5W (12 V-5 W)**.



### Notes

See "Replacing bulbs" on page 82 for relevant instructions.

### Fuses

The main fuse box (1, fig. 85) is located on the left of the frame. The fuses are accessed by removing the cover, on which are indicated the ampere ratings and fuse positions.

The fuse (2) protects the electronic regulator. Remove the protective cap to access the fuses.

A blown fuse can be identified by a broken filament (3, fig. 87).






### Important

To avoid possible short circuits, switch the ignition key to **OFF** before renewing the fuse.



### Warning

Never use a fuse with a rating other than that specified. Failure to observe this rule may damage the electric system or even cause fire.

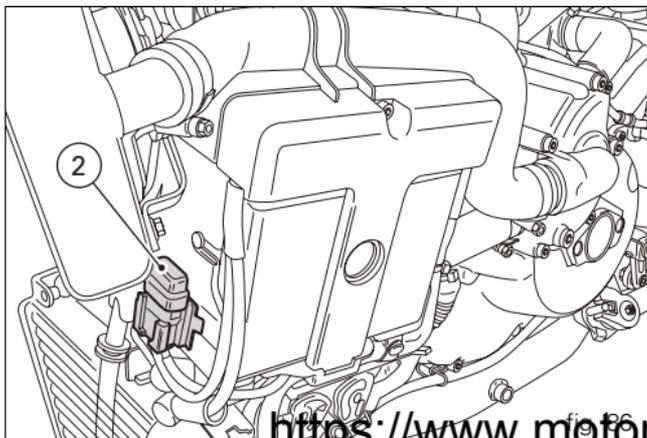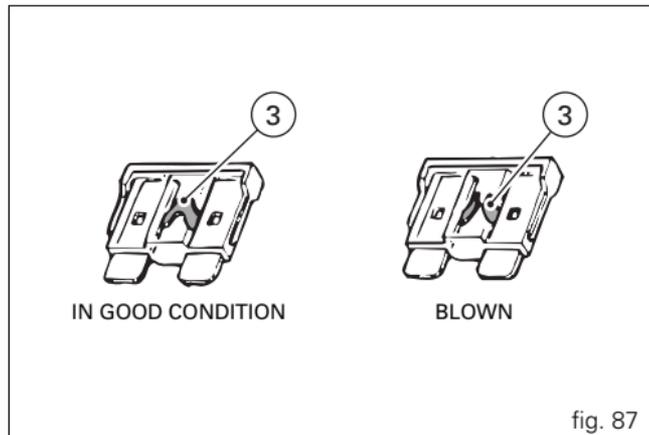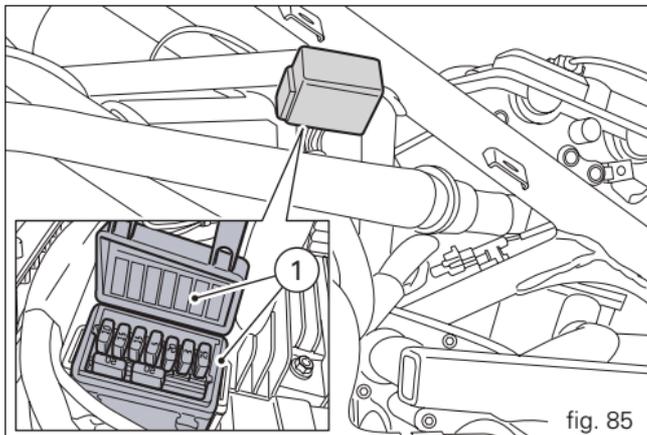

<https://www.motorcycle-manual.com/>

## Key to the electrical system/injection system diagram

- 1) Right-hand handlebar switch
- 2) Key switch
- 3) Left cooling fan
- 4) Right cooling fan
- 5) Starter motor
- 6) Starter contactor
- 7) Battery
- 8) Regulator fuse
- 9) Regulator
- 10) Alternator
- 11) Rear right-turn indicator
- 12) Tail light
- 13) Number plate light
- 14) Rear left-turn indicator
- 15) Fuel tank
- 16) Stepper motor
- 17) Injection relay
- 18) Self-diagnosis
- 19) Horizontal cylinder coil
- 20) Vertical cylinder coil
- 21) Horizontal cylinder spark plug
- 22) Vertical cylinder spark plug
- 23) Horizontal cylinder injector
- 24) Vertical cylinder injector
- 25) Throttle position sensor
- 26) Rpm/timing sensor
- 27) Coolant temperature sensor
- 28) Speed sensor
- 29) Sidestand
- 30) Horn
- 31) Neutral switch
- 32) Oil pressure switch
- 33) Rear brake light switch
- 34) ECU
- 35) Fuses
- 36) Clutch switch
- 37) Front brake light switch
- 38) Left-hand handlebar switch
- 39) Transponder antenna
- 40) Air temperature sensor
- 41) Finish line sensor
- 42) Dashboard
- 43) Lights relay
- 44) Front left-turn indicator
- 45) Headlight
- 46) Right sidelight
- 47) Front right-turn indicator
- 48) EX-UP motor
- 49) Fan relay
- 50) Front left sidelight
- 51) Data Acquisition
- 52) Lambda sensor

<https://www.motorcycle-manual.com/>

## Wire colour coding

- B** Blue
- W** White
- V** Violet
- Bk** Black
- Y** Yellow
- R** Red
- Lb** Light blue
- Gr** Grey
- G** Green
- Bn** Brown
- O** Orange
- P** Pink

E

## Key to fusebox (fig. 85 and fig. 86)

Pos.	Device	Val.
1	Key-on	10 A
2	Lights	15 A
3	Device	15 A
4	Instrument panel	5 A
5	Injection	20 A
6	Engine Electronic Control Unit	5 A
7	Fans	7.5 A



## Notes

The electrical system wiring diagram can be found at the end of this manual.

<https://www.motorcycle-manual.com/>

# Routine maintenance record

<b>km</b>	<b>Name of Ducati Service</b>	<b>Mileage</b>	<b>Date</b>
1000			
12000			
24000			
36000			
48000			
60000			

E

<https://www.motorcycle-manual.com/>

<https://www.motorcycle-manual.com/>

# For United States of America version Only

## Reporting of safety defects

If you believe that your vehicle has a defect which could cause a crash or could cause injury or death, you should immediately inform the National Highway Traffic Safety Administration (NHTSA) in addition to notifying Ducati North America. If NHTSA receives similar complaints, it may open an investigation, and if it finds that a safety defect exists in a group of vehicles, it may order a recall and remedy campaign. However, NHTSA cannot become involved in individual problems between you, your dealer, or Ducati North America. To contact NHTSA, you may either call the Auto Safety Hotline toll-free at 1-800-424-9393 (or 366-0123 in Washington, D.C. area) or write to: NHTSA, U.S. Department of Transportation, Washington, D.C. 20590. You can also obtain other information about motor vehicle safety from the Hotline.

## Safety warnings

Traffic Rules vary from jurisdiction to jurisdiction. Know the regulations in your jurisdiction before riding this motorcycle.



### Warning

This motorcycle is designed and intended for use on streets and other smooth, paved areas only. Do not use this motorcycle on unpaved surfaces. Such use could lead to upset or other accident.

## Noise emission warranty

Ducati Motor S.p.A. warrants that this exhaust system, at the time of sale, meets all applicable U.S. EPA Federal noise standards. This warranty extends to the first person who buys this exhaust system for purposes other than resale, and to all subsequent buyers. Warranty claims should be directed to: Ducati North America, 10443 Bandlely Drive, Cupertino, California, 95014  
Tel: 001.408.253.0499 - Fax: 001.408.253.4099.

## Noise and exhaust emission control system information

### Source of Emissions

The combustion process produces carbon monoxide and hydrocarbons. Control of hydrocarbons is very important because under certain conditions, they react to form photochemical smog when subjected to sunlight.

<https://www.motorcycle-manual.com/>

Carbon monoxide does not react in the same way, but is toxic. Ducati utilizes lean carburetor settings and other systems to reduce carbon monoxide and hydrocarbons.

### **Exhaust Emission Control System**

The Exhaust Emission Control System is composed of lean carburetor settings, and no adjustments should be made except idle speed adjustments with the throttle stop screw. The Exhaust Emission Control System is separate from the crankcase emission control system.

### **Crankcase Emission Control System**

The engine is equipped with a closed crankcase system to prevent discharging crankcase emissions into the atmosphere. Blow-by gas is returned to the combustion chamber through the air cleaner and the throttle body. Evaporative Emission Control System  
California motorcycles are equipped with an evaporative emission control system which consists of a charcoal canister and associated piping. This system prevents the escape of fuel vapors from the throttle body and fuel tank.

### **Tampering warning**

Tampering with Noise Control System Prohibited. Federal Law prohibits the following acts or causing thereof:

(1) the removal or rendering inoperative by any person, other than for purposes of maintenance, repair, or replacement, of any device or element of design incorporated into any new vehicle for the purpose of noise control prior to its sale or delivery to the ultimate purchaser or while it is in use; or

(2) the use of the vehicle after such device or element of design has been removed or rendered inoperative by any person.

### **Among those acts presumed to constitute tampering are the acts listed below:**

- (1) Removal of, or puncturing the muffler, baffles, header pipes or any other component which conducts exhaust gases.
- (2) Removal or puncturing of any part of the intake system.
- (3) Lack of proper maintenance.
- (4) Replacing any moving part of the vehicle, or parts of the exhaust or intake system, with parts other than those specified by the manufacturer.

This product should be checked for repair or replacement if the motorcycle noise has increased significantly through use. Otherwise, the owner may become subject to penalties under state and local ordinances.

### **Problems that may affect motorcycle emissions**

If you are aware of any of the following symptoms, have the vehicle inspected and repaired by your local Ducati dealer.

Symptoms:

Hard starting or stalling after starting.

Rough idle.

Misfiring or backfiring during acceleration.

After-burning (backfiring).

Poor performance (driveability) and poor economy.

<https://www.motorcycle-manual.com/>

## Riding safety

The points given below are applicable for every day motorcycle use and should be carefully observed for safe and effective vehicle operation.

A motorcycle does not provide the impact protection of an automobile, so defensive riding in addition to wearing protective apparel is extremely important.

Do not let protective apparel give you a false sense of security. Before changing lanes, look over your shoulder to make sure the way is clear. Do not rely solely on the rear view mirror; you may misjudge a vehicle's distance and speed, or you may not see it at all.

When going up steep slopes, shift to a lower gear so that there is plenty of power to spare rather than overloading the engine.

When applying the brakes, use both the front and rear brakes. Applying only one brake for sudden braking may cause the motorcycle to skid and lose control.

When going down long slopes, control vehicle speed by closing the throttle. Use the front and rear brakes for auxiliary braking.

Riding at the proper rate of speed and avoiding unnecessarily fast acceleration are important not only for safety and low fuel consumption but also for long vehicle life and quieter operation.

When riding in wet conditions or on loose roadway surfaces, the ability to maneuver will be reduced. All of your actions should be smooth under these conditions. Sudden acceleration, braking or turning may cause loss of control.

When the roadway is wet, rely more on the throttle to control vehicle speed and less on the front and rear brakes.

The throttle should also be used judiciously to avoid skidding the rear wheel from too rapid acceleration or deceleration.

On rough roads, exercise caution, slow down, and grip the fuel tank with your knees for better stability.

When quick acceleration is necessary as in passing, shift to a lower gear to obtain the necessary power.

Do not down shift at too high an r.p.m. to avoid damage to the engine from overrevving.

Avoiding unnecessary weaving is important to the safety of both the rider and other motorists.

Do not exceed the legal speed limit or drive too fast for existing conditions. High speed increases the influence of any condition affecting stability and the loss of control.

Operate motorcycle only at moderate speed and out of traffic until you have become thoroughly familiar with its operation and handling characteristics under all conditions. This is a very high performance motorcycle, designed and intended for use by experienced careful riders only!

A new motorcycle must be operated according to a special break-in procedure (see Running in recommendations).



### Warning

Before starting engine, check for proper operation of brake, clutch, shifter, throttle controls, correct fuel and oil supply.

Gasoline is extremely flammable and is explosive under certain conditions. Refuell in a well ventilated area with the engine stopped. Do not smoke or allow open flames or sparks when refuelling or servicing the fuel system.

<https://www.motorcycle-manual.com/>

Always close the fuel petcock when the engine is not running to prevent flooding of the throttle body. Do not overfill fuel tank (see instructions page 55).  
 Motorcycle exhaust contains poisonous carbon monoxide gas. Do not inhale exhaust gases and never run the engine in a closed garage or confined area.

Use only Ducati approved parts and accessories.

This motorcycle was not intended to be equipped with a sidecar or to be used to tow any trailer or other vehicle. Ducati does not manufacture sidecars or trailers and cannot predict the effects of such accessories on handling or stability, but can only warn that the effects will be adverse and any damage to motorcycle components caused by the use of such accessories will not be remedied under warranty.



### Warning

Do not ride the motorcycle with helmets attached to the hook; the helmets could cause an accident by distracting the operator or interfering with normal vehicle operation.

### Protective apparel

Always wear a helmet. Most motorcycle accident fatalities are due to head injuries.

For safety eye protection, gloves, and high top, sturdy boots should also be worn.

The exhaust system becomes very hot during operation, never touch the exhaust system. Wear clothing that fully covers your legs. Do not wear loose clothing which could catch on the control levers, footrests, wheels, or chain.

Any amount of alcohol will significantly interfere with your ability to safely operate your motorcycle. Don't drink and ride.

### Vehicle identification number (VIN)

Every Ducati motorcycle is identified by two identification numbers (see page 9). fig. A specifically shows the frame identification numbers.


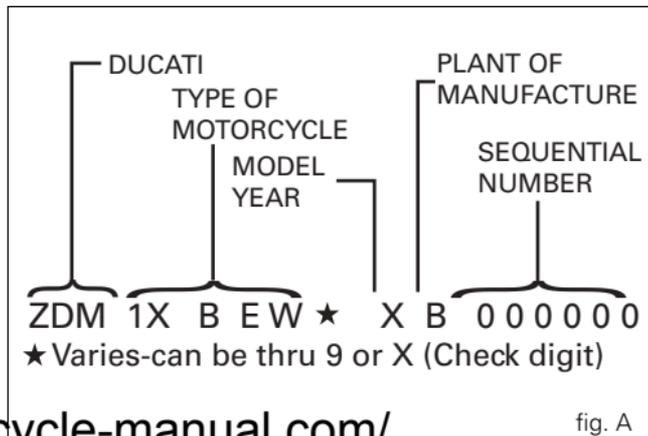


fig. A

Label location (fig. B)

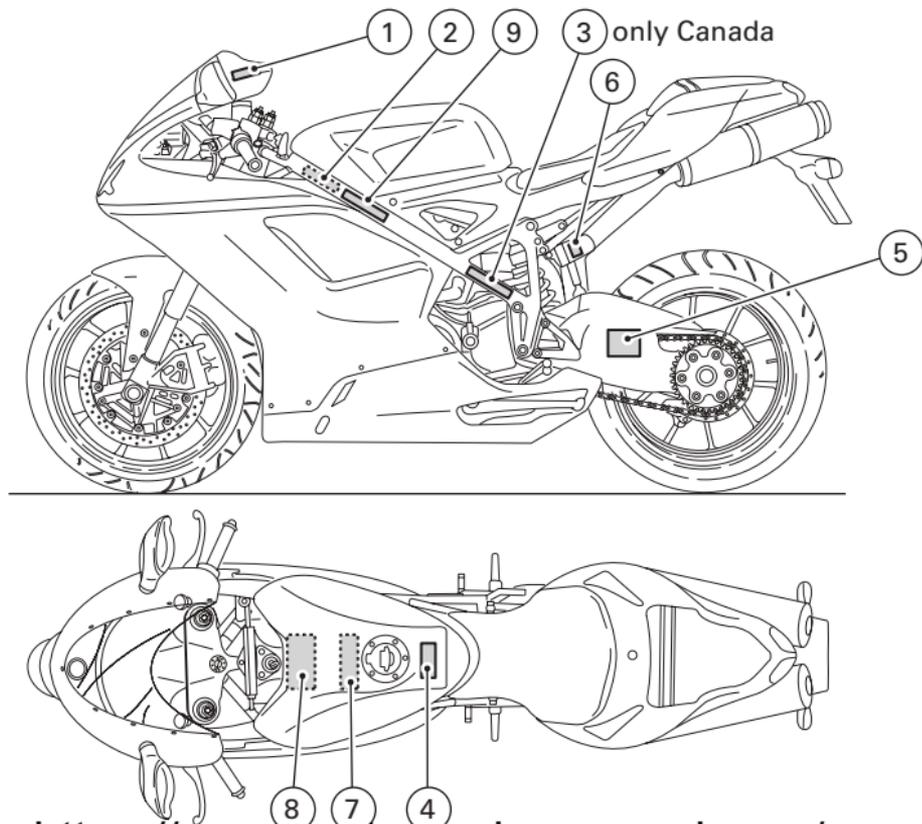

<https://www.motorcycle-manual.com/>

fig. B

**WARNING**

DO NOT ATTEMPT TO LOOK THROUGH THIS FAIRING. THIS IS NOT A WINDSHIELD, BUT AN AERODYNAMIC FAIRING ONLY. FAILURE TO OBSERVE THIS WARNING COULD RESULT IN A COLLISION OR UPSET AND CONSEQUENT SERIOUS BODILY INJURY. (044-001-108-10)

1

Manufactured by **DUCATI/MOTOPHOLDING spa**DATE:  /  / 

GVWR:  Lbs ( kg)  
 GAWR front:  Lbs ( kg) with  tire,  RIM at  PSI cold.  
 GAWR rear:  Lbs ( kg) with  tire,  RIM at  PSI cold.  
 This vehicle conforms to all applicable Federal Motor Vehicle Safety standards in effect on the date of manufacture shown above. Type classification: Motorcycle

Vehicle I.D. No.: 

044-001-108-10

2

MANUFACTURED BY / FABRIQUE PAR: <b>DUCATI/MOTOPHOLDING spa</b>		TYPE OF VEHICLE / TYPE DE VÉHICULE: MC		DATE: **/**/****	
GVWR / PNBV: ** KG		VIN / N.I.V.: ZDM *****			
GVWR / PNBV KG	TRIPLOTTI - INVERSO - PAVANTE	COLD INFL. PRESS.	FRIGIDI INFL. A FREDD		
***	***	PSI	PSI	***	***
***	***	PSI	PSI	***	***

THIS VEHICLE CONFORMS TO ALL APPLICABLE STANDARDS PRESCRIBED UNDER THE CANADIAN MOTOR VEHICLE SAFETY REGULATIONS IN EFFECT ON THE DATE OF MANUFACTURE.  
 CE VÉHICULE EST CONFORME À TOUTES LES NORMES QUELLES SONT APPLICABLES EN VERTU DU RÈGLEMENT SUR LA SÉCURITÉ DES VÉHICULES AUTOMOBILES DU CANADA EN VIGUEUR À LA DATE DE SA FABRICATION. (044-001-108-10)

3 (Only Canada)

**CAUTION**

NEVER FILL TANK SO FUEL LEVEL RISES INTO FILLER NECK. IF TANK IS OVERFILLED, HEAT MAY CAUSE FUEL TO EXPAND AND FLOW INTO EVAPORATIVE EMISSION CONTROL SYSTEM RESULTING IN HARD STARTING AND ENGINE HESITATION.


4

Tensione catena (sul cavalletto laterale)  
Chain Tension Adjustment (on side stand)

5

**WARNING**  
 CONTAINS HIGHLY COMPRESSED GAS. USE ONLY PERFECTLY DRY NITROGEN GAS, OTHER GASES MAY CAUSE EXPLOSION. DO NOT INCINERATE. REFER TO OWNER'S MANUAL FOR REGULATING GAS.

6

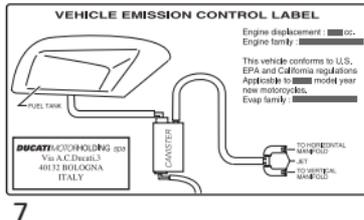

7

**VEHICLE EMISSION CONTROL INFORMATION**

Engine displacement:  cc  
 Engine family:  cc  
 Engine exhaust control system:

THIS VEHICLE CONFORMS TO U.S. EPA REGULATIONS APPLICABLE TO  MODEL YEAR NEW MOTORCYCLES.

**ENGINE TUNE-UP SPECIFICATIONS**

ITEM	SPECIFICATIONS	INSTRUCTIONS
IGNITION TIMING:	<input type="checkbox"/> bTDC at idle speed	No adjustment
IDLE SPEED (RPM):	<input type="checkbox"/> RPM	No adjustment
IDLE MIXTURE:	Opening: <input type="checkbox"/> mm	No adjustment
	Closing: <input type="checkbox"/> mm	
VALVE CLEARANCE (in & ex):	<input type="checkbox"/> mm	See Service Manual
SPARK PLUG: CHAMPION		
SPARK PLUG GAP (mm): <input type="checkbox"/>	OIL: <input type="checkbox"/>	
	FUEL: Unleaded gasoline	

**DUCATI/MOTOPHOLDING spa - BOLOGNA - ITALY**

8

**MOTORCYCLE NOISE EMISSION CONTROL INFORMATION**

THIS  MOTORCYCLE,  MEETS EPA NOISE EMISSION REQUIREMENTS OF  dBA AT  RPM BY THE FEDERAL TEST PROCEDURE.  
 MODIFICATIONS WHICH CAUSE THIS MOTORCYCLE TO EXCEED FEDERAL NOISE STANDARDS ARE PROHIBITED BY FEDERAL LAW.  
 SEE OWNER'S MANUAL. (044-001-108-10)

9

<https://www.motorcycle-manual.com/>

## California evaporation emission system


This system consists of (fig. C):

- 1) Warm air inlet;
- 2) Canister;
- 3) Dell'Orto jet;
- 4) Fuel tank;
- 5) Breather pipe;
- 6) Intake manifolds.



### Important

In the event of fuel system malfunction, contact Ducati's authorized Service Centres.

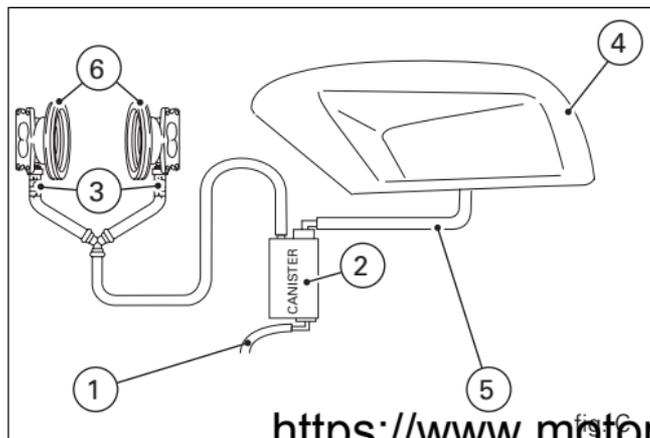

## Ducati limited warranty on emission control system

Ducati North America, Inc., 10443 Bandle Drive Cupertino, California, 95014 warrants that each new 1998 and later Ducati motorcycle, that includes as standard equipment a headlight, tail-light and stoplight, and is street legal:

A) is designed, built and equipped so as to conform at the time of initial retail purchase with all applicable regulations of the United States Environmental Protection Agency, and the California Air Resources Board; and B) is free from defects in material and workmanship which cause such motorcycle to fail to conform with applicable regulations of the United States Environmental Protection Agency or the California Air Resources Board for a period of use of 30,000 kilometers (18,641 miles) or 5 (five) years from the date of initial retail delivery, whichever first occurs.

### I. Coverage

Warranty defects shall be remedied during customary business hours at any authorized Ducati motorcycle dealer located within the United States of America in compliance with the Clean Air Act and applicable regulations of the United States Environmental Protection Agency and the California Air Resources Board. Any part or parts replaced under this warranty shall become the property of Ducati.

<https://www.motorcycle-manual.com/>

In the state of California only, emissions related warranted parts are specifically defined by that state's Emissions Warranty Parts List. These warranted parts are: carburetor and internal parts; intake manifold; fuel tank, fuel injection system; spark advance mechanism; crankcase breather; air cutoff valves; fuel tank cap for evaporative emission controlled vehicles; oil filler cap; pressure control valve; fuel/vapor separator; canister; igniters; breaker governors; ignition coils; ignition wires; ignition points, condensers, and spark plugs if failure occurs prior to the first scheduled replacement, and hoses, clamps, fittings and tubing used directly in these parts. Since emission related parts may vary from model to model, certain models may not contain all of these parts and certain models may contain functionally equivalent parts.

In the state of California only, Emission Control System emergency repairs, as provided for in the California Administrative Code, may be performed by other than an authorized Ducati dealer. An emergency situation occurs when an authorized Ducati dealer is not reasonably available, a part is not available within 30 days, or a repair is not complete within 30 days. Any replacement part can be used in an emergency repair. Ducati will reimburse the owner for the expenses, including diagnosis, not to exceed Ducati's suggested retail price for all warranted parts replaced and labor charges based on Ducati's recommended time allowance for the warranty repair and the geographically appropriate hourly labor rate. The owner may be required to keep receipts and failed parts in order to receive compensation.

## **II. Limitations**

This Emission Control System Warranty shall not cover any of the following:

- A. Repair or replacement required as a result of
  - (1) accident,
  - (2) misuse,
  - (3) repairs improperly performed or replacements improperly installed,
  - (4) use of replacement parts or accessories not conforming to Ducati specifications which adversely affect performance and/or
  - (5) use in competitive racing or related events.
- B. Inspections, replacement of parts and other services and adjustments required for routine maintenance.
- C. Any motorcycle on which odometer mileage has been changed so that actual mileage cannot be readily determined.

## **III. Limited liability**

A. The liability of Ducati under this Emission Control Systems Warranty is limited solely to the remedying of defects in material or workmanship by an authorized Ducati motorcycle dealer at its place of business during customary business hours. This warranty does not cover inconvenience or loss of use of the motorcycle or transportation of the motorcycle to or from the Ducati dealer. Ducati shall not be liable for any other expenses, loss or damage, whether direct, incidental, consequential or exemplary arising in connection with the sale or use of or inability to use the Ducati motorcycle for any purpose. Some states do not allow the exclusion or limitation of any incidental or consequential damages, so the above limitations may not apply to you.

<https://www.motorcycle-manual.com/>

B. No express emission control system warranty is given by Ducati except as specifically set forth herein. Any emission control system warranty implied by law, including any warranty of merchantability or fitness for a particular purpose, is limited to the express emission control systems warranty terms stated in this warranty. The foregoing statements of warranty are exclusive and in lieu of all other remedies. Some states do not allow limitations on how long an implied warranty lasts so the above limitation may not apply to you.

C. No dealer is authorized to modify this Ducati Limited Emission Control Systems Warranty.

#### **IV. Legal rights**

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

**V.** This warranty is in addition to the Ducati limited motorcycle warranty.

#### **VI. Additional information**

Any replacement part that is equivalent in performance and durability may be used in the performance of any maintenance or repairs. However, Ducati is not liable for these parts.

The owner is responsible for the performance of all required maintenance. Such maintenance may be performed at a service establishment or by any individual. The warranty period begins on the date the motorcycle is delivered to an ultimate purchaser.

Ducati North America, Inc.  
10443 Bandlely Drive  
Cupertino, California, 95014  
Tel: 001.408.253.0449 / Fax: 001.408.253.4099  
E-mail: customerservice@ducatiusa.com  
Web site: www.ducatiusa.com

<https://www.motorcycle-manual.com/>

# Routine maintenance record

<b>Km</b>	<b>mi</b>	<b>Ducati Service Name</b>	<b>Mileage</b>	<b>Date</b>
1,000	600			
12,000	7,500			
24,000	15,000			
36,000	22,500			
48,000	30,000			
60,000	37,500			

USA  
M

<https://www.motorcycle-manual.com/>



Ducati Motor Holding spa via Cavalieri Ducati, 3 40132 Bologna, Italia  
Tel. +39 051 6413111 Fax +39 051 406580  
[www.ducati.com](http://www.ducati.com)

<https://www.motorcycle-manual.com/>

